

## **User Manual**

### **WHR-HP-G300N**

**AirStation NFINITI HighPower Router and AccessPoint**

### **WHR-HP-GN**

**AirStation Wireless N Technology HighPower Router and Access point**



# Contents

<b>Chapter 1 Product Overview .....</b>	<b>5</b>
Features .....	5
Air Navigator CD Requirements .....	6
300/150 Mbps High Speed Mode.....	6
Package Contents.....	7
Hardware Overview.....	8
Front Panel LED's.....	8
Back Panel.....	10
Top .....	11
Bottom.....	11
Right Side .....	12
<b>Chapter 2 Placing Your AirStation .....</b>	<b>13</b>
Antenna Placement.....	13
Vertical Placement .....	13
Horizontal Placement.....	14
Wall-Mounting .....	15
<b>Chapter 3 Installation .....</b>	<b>16</b>
CD Setup.....	16
Manual Setup.....	16
<b>Chapter 4 Configuration .....</b>	<b>18</b>
How to Access the Web-Based Configuration Utility.....	18
Configuration Menu (Router Mode).....	20
Configuration Menu (Bridge Mode).....	22
Setup.....	24

Internet/LAN (LAN Config) .....	26
Internet (Router Mode only) .....	26
PPPoE (Router Mode only).....	27
DDNS (Router Mode only) .....	30
LAN .....	34
DHCP Lease (Router Mode only) .....	36
NAT (Router Mode only) .....	37
Route .....	38
Wireless Config .....	39
WPS.....	39
AOSS .....	40
Basic .....	42
Advanced .....	46
WMM.....	47
MAC Filter .....	49
Multicast Control .....	50
WDS.....	51
Security (Router Mode only) .....	53
Firewall (Router Mode only).....	53
IP Filter (Router Mode only).....	55
VPN Pass Through (Router Mode only) .....	56
LAN Config (Router Mode only) .....	57
Port Forwarding (Router Mode only).....	57
DMZ (Router Mode only) .....	58
UPnP (Router Mode only).....	59
QoS (Router Mode only).....	60
Admin Config.....	61
Name .....	61
Password .....	62
Time/Date .....	63
NTP .....	64
Access .....	65
Log.....	66

Save/Restore .....	67
Initialize/Restart .....	68
Update .....	69
<b>Diagnostic .....</b>	<b>70</b>
System Info .....	70
Logs .....	72
Packet Info .....	73
Client Monitor .....	74
Ping .....	75

---

## **Chapter 5 Connect to a Wireless Network ..... 76**

Automatic Secure Setup (AOSS/WPS).....	76
Windows Vista (Client Manager V) .....	77
Windows XP (Client Manager 3).....	78
Other Devices (e.g. Game Console).....	79
Manual Setup .....	79
Windows 7 (WLAN AutoConfig) .....	79
Windows Vista (WLAN AutoConfig) .....	80
Windows XP (Wireless Zero Configuration).....	83

---

## **Chapter 6 Trouble Shooting ..... 84**

Cannot connect to the Internet over wired connection.....	84
Cannot access the web-based configuration utility. ....	84
Cannot connect to the network wirelessly. ....	85
You forgot AirStation's SSID, Encryption Key, or Password... ..	85
The link speed is slower than 300/150 Mbps (Maximum link speed is only 130/65Mbps). ..	85
Other Tips.....	86

---

## **Appendix A Specifications ..... 89**

WHR-HP-G300N.....	89
-------------------	----

WHR-HP-GN.....	90
<b>Appendix B Default Configuration Settings.....</b>	<b>91</b>
<b>Appendix C TCP/IP Settings in Windows.....</b>	<b>96</b>
<b>Appendix D Restoring the Default Configuration.....</b>	<b>99</b>
<b>Appendix E Regulatory Compliance Information.....</b>	<b>100</b>
<b>Appendix F Environmental Information .....</b>	<b>106</b>
<b>Appendix G GPL Information .....</b>	<b>107</b>
<b>Appendix H Warranty Information .....</b>	<b>108</b>
<b>Appendix I Contact Information .....</b>	<b>109</b>
North America .....	109
Europe.....	109
Asia Pacific.....	110

# Chapter 1

## Product Overview

### Features

---

#### **Supports IEEE802.11n and IEEE802.11b/g**

With support for Wireless-N, Wireless-G, and Wireless-B standards, the AirStation can transfer data to and from all standard 2.4 GHz wireless clients. (WHR-HP-GN is compatible with some Wireless-N features.)

#### **Dual speed mode**

Dual speed mode makes wireless transmission faster by using 2 channels, allowing 300Mbps for WHR-HP-G300N and 150Mbps for WHR-HP-GN data transmission.

#### **Support AOSS and WPS**

Both AOSS (AirStation One-touch Secure System) and WPS (Wi-Fi Protected Setup) are supported. These automatic connection standards make connection with compatible wireless devices easier.

#### **Security Features**

The AirStation is equipped with following security features:

- AOSS
- WPS
- WPA-PSK (TKIP/AES)
- WPA2-PSK(TKIP/AES)
- WPA/WPA2 mixed PSK
- WEP(128/64bit)
- Privacy Separator
- MAC address access restriction
- Deny Any Connection/SSID stealth feature
- Setting screen with password
- Firewall feature with easy rules

#### **Automatic Channel Selection**

Monitors wireless interference and automatically assigns the clearest, best channel.

#### **Roaming**

You can use multiple AirStations to cover a large area. Wireless clients can automatically switch AirStations for the best signal.

### **Initialization**

To restore settings back to the factory defaults, hold down the Reset button on the bottom of the unit.

### **Browser Based Administration**

This unit can be easily configured from a web browser on your computer.

### **Auto Mode (Router/Bridge Automatic Recognition)**

Auto mode detects whether your network has a router or not and automatically switches to the appropriate router or bridge mode. You can also manually switch between modes. (See page 10).

## **Air Navigator CD Requirements**

---

The AirStation wireless router and access point works with most wired and wireless devices. The automatic installation program on the CD requires Windows 7, Vista or XP to run. Client Manager software is included for Windows Vista and XP. The use of other operating systems may require that the AirStation be manually configured from a browser window.

## **300/150 Mbps High Speed Mode**

---

300 Mbps is the link speed of WHR-HP-G300N and 150 Mbps is for WHR-HP-GN when using Wireless-N mode. It represents actual wireless data speeds, including overhead. Because the overhead is not available for user data transfer, usable wireless throughput will be substantially slower.

## Package Contents

---


Following items are included in your AirStation. If any of the items are missing, please contact your vender.

- Main unit.....1
- Detachable antenna .....2 for G300N / 1 for GN
- AC adapter.....1
- Stand for vertical/wall-mounting.....1
- Screws for wall-mounting.....2
- LAN cable.....1
- Air Navigator CD.....1
- Quick Setup Guide.....1



# Hardware Overview

## Front Panel LED's

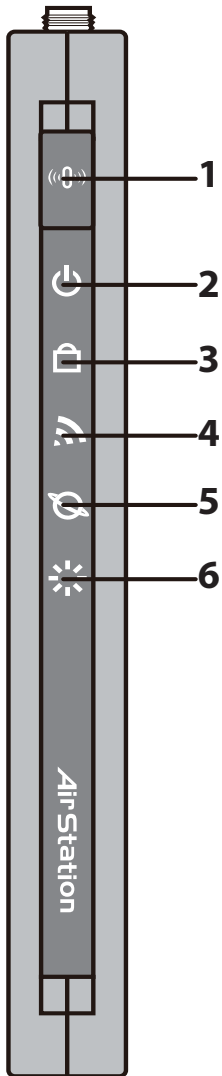

### 1 AOSS Button

Hold down this button until the Security LED flashes (approx. 1 second), while the unit's power is on, initiates AOSS/WPS mode, allowing the unit to exchange security keys with AOSS or WPS compatible devices.

### 2 POWER LED (Green)

On: The AC adapter is connected  
Off: The AC adapter is not connected

### 3 SECURITY LED (Amber)

Indicates security status.

Off: Encryption is not set  
On: Encryption has been set

Double blink: The unit is waiting for an AOSS or WPS security key

Blinking: AOSS/WPS error; failed to exchange security keys

Note: When the Security LED is lit, an encryption key has been set. You can verify that the encryption key has been set in the web configuration screen on page 40.

### 4 WIRELESS LED (Green)

Indicates wireless LAN status.

Blinking: Wireless LAN is transmitting

On: Wireless LAN is connected but not active

### 5 ROUTER LED (Green)

On: Router functionality is enabled

Blinking: Router functionality is disabled

### 6 DIAG LED (Red)

This indicates the status of this unit depending on the number of blinks per cycle.


Note: When the unit is first turned on or restarted, the Diag LED will blink for almost a minute during boot. This is normal.

<b>Diag LED status</b>	<b>Meaning</b>	<b>Status</b>
2 blinks * <sup>1</sup>	Flash ROM error	Cannot read or write to the flash memory.
3 blinks * <sup>1</sup>	Ethernet (wired) LAN error	Ethernet LAN controller is malfunctioning.
4 blinks * <sup>1</sup>	Wireless LAN error	Wireless LAN controller is malfunctioning.
5 blinks	IP address setting error	Because the network addresses of both the Internet port (WAN port) and the LAN port are the same, it is not possible to establish communication. Change the LAN side IP address of this unit.
Continuously blinking * <sup>2</sup>	Updating the firmware Saving settings Initializing settings	Updating the firmware. Saving the settings. Initializing the settings.

\*1 Unplug the AC adapter from the wall socket, wait for a few seconds, and then plug it again. If the light still flashes, please contact technical support.

\*2 Never unplug the AC adapter while the Diag LED is blinking continuously.

## Back Panel

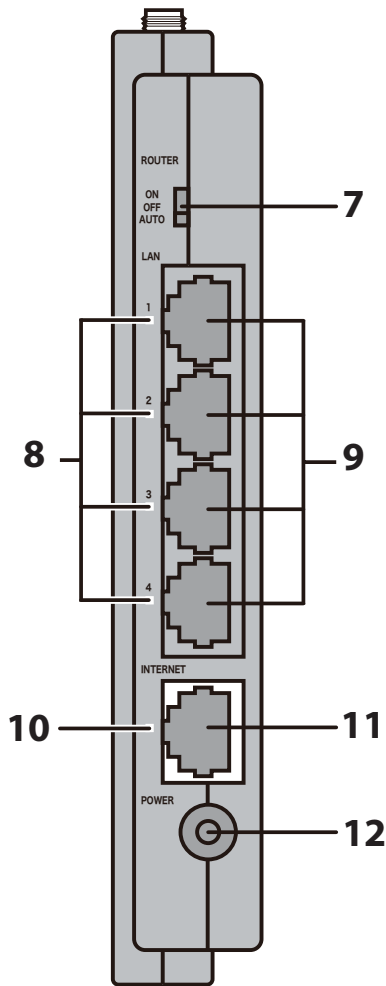

### 7 ROUTER Switch

Switches router mode between enabled, disabled, and auto.

On: Router functionality is enabled (router mode).

Off: Router functionality is disabled (bridge/AP mode).

Auto: This switches between modes automatically based on whether or not another router is detected on the Internet port. The default setting for this switch is Auto.

### 8 LAN LED (Green)

On: An Ethernet device is connected.

Flashing: An Ethernet device is communicating.

### 9 LAN Port

Connect your computer, hub, or other Ethernet devices to these ports. This switching hub supports 10Mbps and 100Mbps connections.

### 10 INTERNET LED (Green)

On: The Internet port is connected.

Flashing: The Internet port is transmitting data.

### 11 INTERNET Port


10Mbps and 100Mbps connections are supported.

Note: In bridge/AP mode (router switch off), the Internet port becomes a regular LAN port, for a total of 5 usable LAN ports.

### 12 DC Connector


Connect the included AC adapter.

## Top

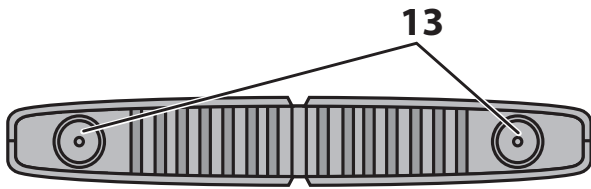


- 13 Antenna connector** Plugs the included detachable antenna(s). Refer to page 13 for more detail.

## Bottom

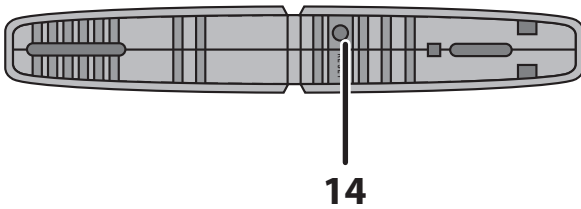

- 14 RESET Button** Holding this button until the Diag LED comes on, while the unit's power is on, will initialize its settings.

## Right Side

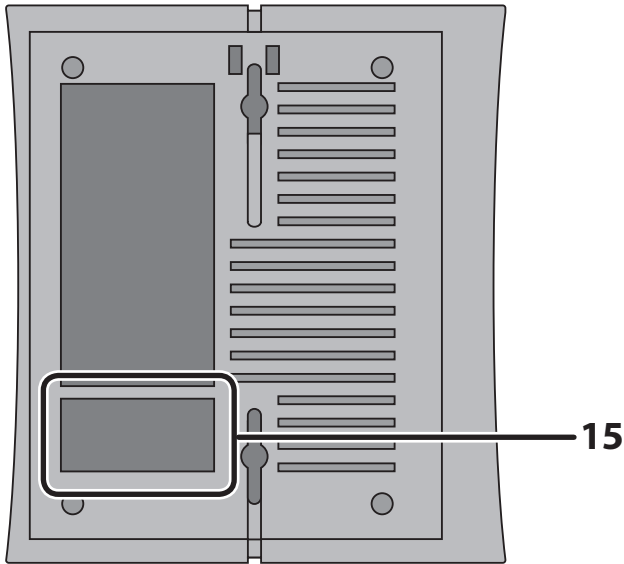

Note: The right side of the unit may become hot. Please be careful not to place anything next to it that could be damaged by heat.

### 15 Factory Default Settings

This sticker shows the default information of AirStation's SSID, encryption key, and WPS PIN. Encryption key is blank if encryption is not enabled in default settings.

# Chapter 2


## Placing Your AirStation

Note all the illustrations refer to WHR-HP-G300N.

### Antenna Placement

---


Detachable and movable antenna is included in this package. WHR-HP-G300N has 2 of them while WHR-HP-GN has a single antenna. Screw the antenna(s) clockwise to set up.

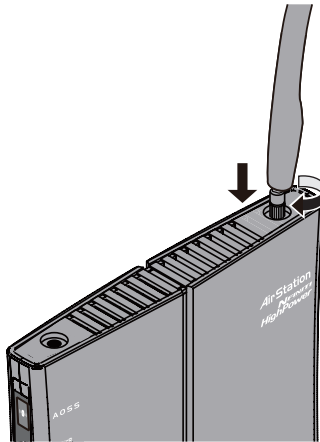

### Vertical Placement

---

To place unit vertically, refer to the following figure to place the vertical/wall-mounting stand.

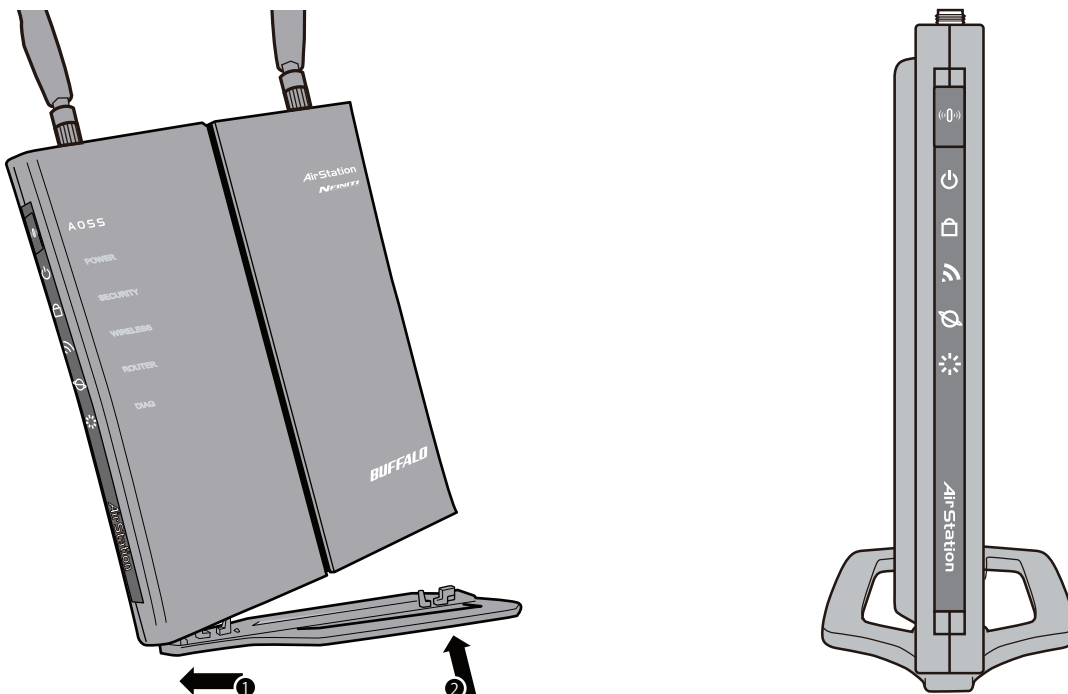


---

## Horizontal Placement

---



Place the unit horizontally as the figure below.

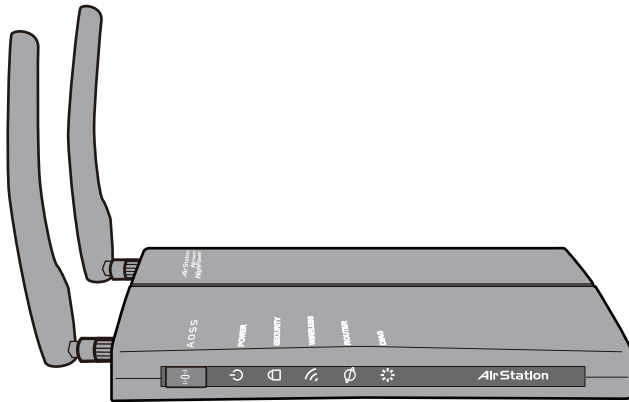

## Wall-Mounting

---


1

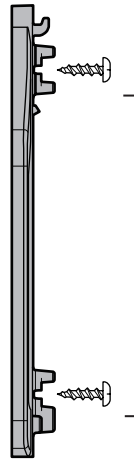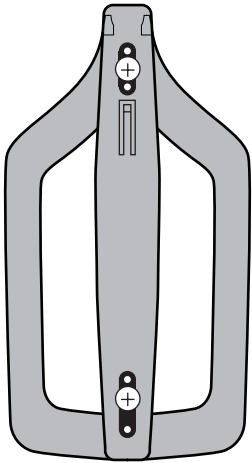

Fix the vertical/wall-mount stand on the wall using screws.

8.5 cm  
(~3.3 inches)

2

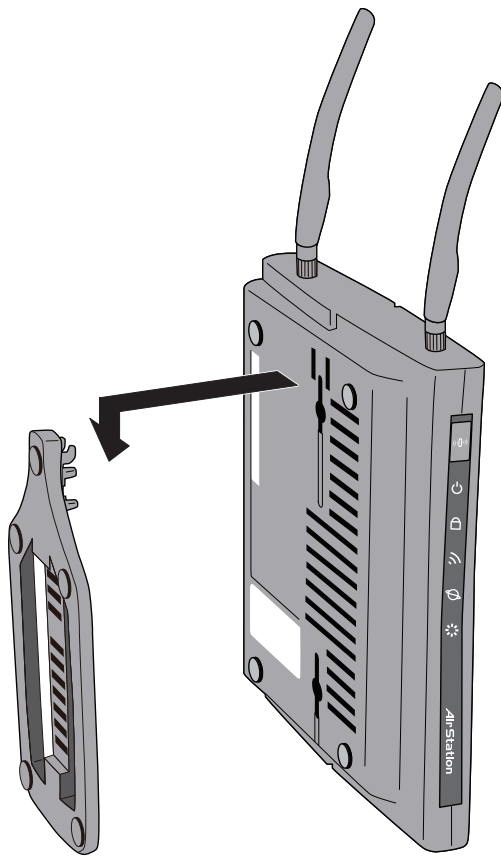

Match the centers of your AirStation and its vertical/wall-mounting stand, and slide downward as shown on the left.



# Chapter 3

## Installation

### CD Setup

---

You can set up this unit with the included software CD. Insert the CD into your PC and follow the instructions on the screen.



\* CD Setup is supported for Windows 7/Vista/XP only.

### Manual Setup


---

To configure your AirStation manually, follow the procedure below.


**1** Turn off your computer and modem.

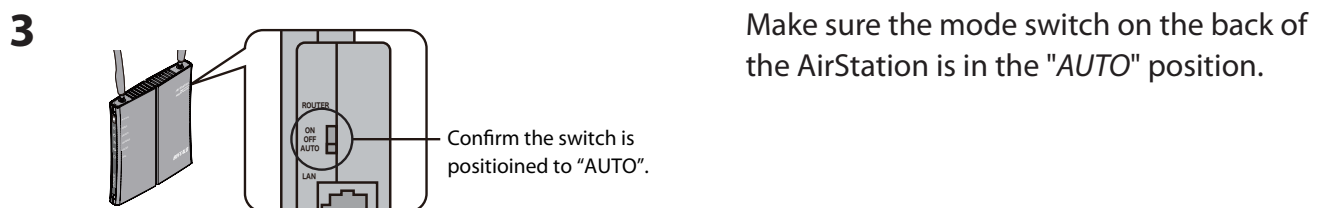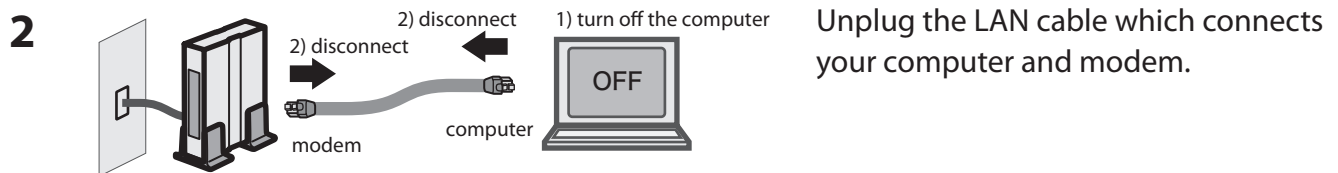


**4** Plug one end of the LAN cable into your modem and the other side to the Internet port of the AirStation. Turn on your modem.

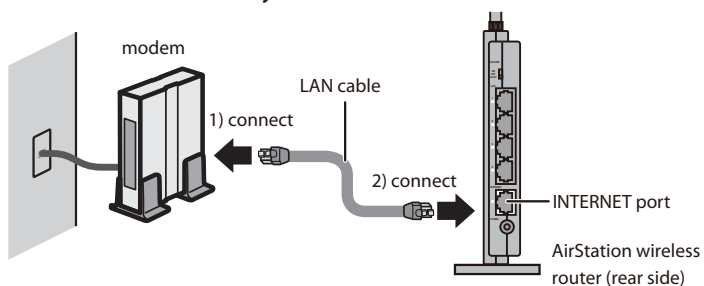

- 5 Connect your computer to one of the AirStation's LAN ports with the LAN cable. Turn on the AirStation, wait one minute, and then turn on your computer.

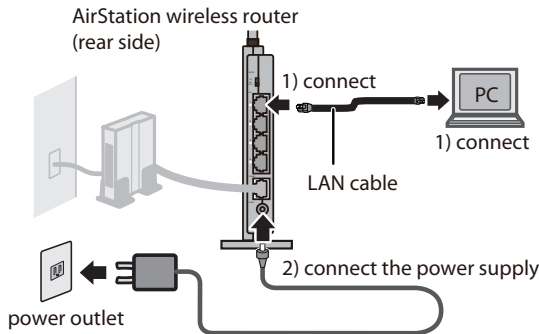

- 6 Confirm the devices are connected correctly as the below diagram shows.

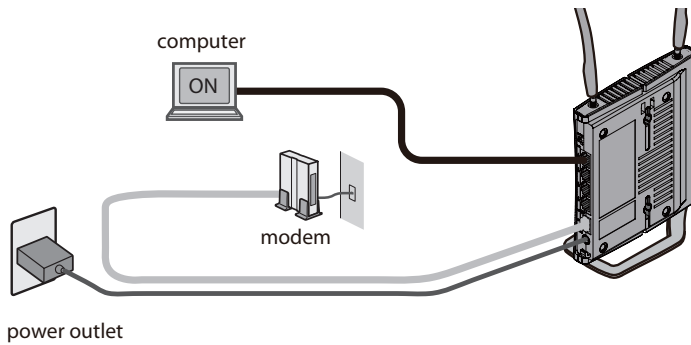

- 7 Wait for a while, and then make sure that the AirStation's LEDs are lit as described below:

POWER	Green light is on
WIRELESS	Green light is on or blinking
ROUTER	Green light is on or off depending on your network
DIAG	Off
LAN	Green light is on or blinking
INTERNET	Green light is on or blinking

※ Refer to page 8 and 10 for LED locations and other details.

- 8 Launch a web browser. If the "home" setup screen is displayed, setup is complete. If a user name and password screen is displayed, enter "root" (in lower case) for the user name, leave the password blank, and click "OK". Follow the instructions on the screen to complete setup.

You've completed initial setup of your AirStation. Refer to Chapter 4 for advanced settings.

# Chapter 4


## Configuration

This chapter explains the advanced settings for the AirStation. To change advanced settings, use the AirStation's web-based configuration utility.

### How to Access the Web-Based Configuration Utility

To display the configuration of the AirStation, follow the procedure below.

1 Launch a web browser.

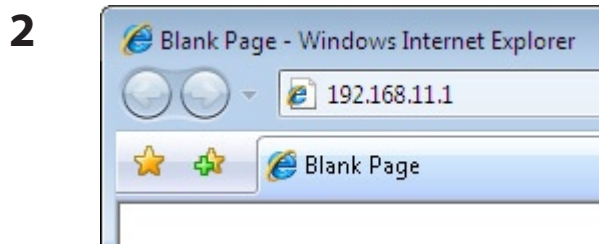

Enter the router's LAN-side IP address in the address field, and press the "Enter" key.


- Note:
- The AirStation's default LAN-side IP address depends on the position of the mode switch.  
In router mode: 192.168.11.1  
In bridge mode: 192.168.11.100(\*)  
Note: If the router switch is set to "AUTO" and the unit is working in bridge mode, an IP address is assigned to this unit from a DHCP server.
  - If you change the IP address of this unit, use the new IP address.



When this screen appears, enter "root" (in lower case) for the user name and the password that you set during initial setup. Click "OK".

- Note:
- By default, the password is blank (not set).
  - If you forget your password, hold down the Reset button (page 11) to initialize all settings. The password will then be blank. Note that all other settings will also revert to their default values.

4

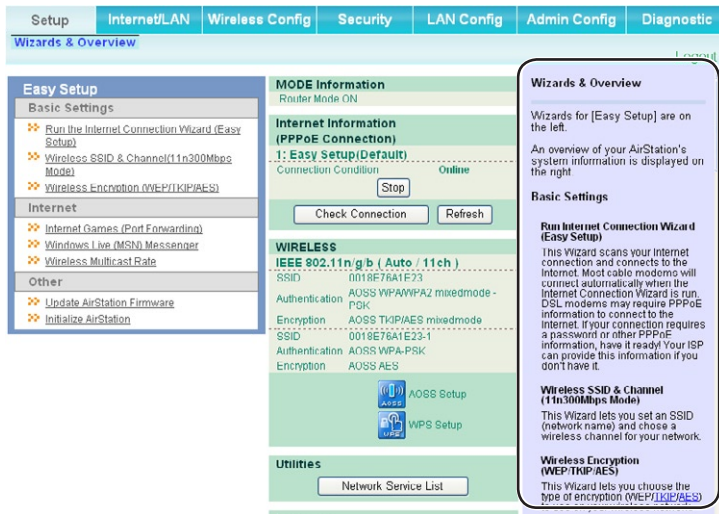

The configuration screen is displayed.

Help is always displayed on the right side of the configuration screen. Refer to the Help screens for more information on each page in the web-based configuration screens.

## Configuration Menu (Router Mode)

The menu structure for the AirStation in router mode is the following. Please refer to the pages listed at right for explanations of each item.

Main screen	Descriptions	Page
<b>Internet/LAN</b>		
Internet	Configure Internet side port and settings	Page 26
PPPoE	PPPoE settings (DSL login)	Page 27
DDNS	DNS settings	Page 30
VPN Server	VPN server settings	Page 32
LAN	LAN side port and DHCP server configuration	Page 34
DHCP Lease	DHCP lease settings	Page 36
NAT	Network address translation settings, used to connect LAN side devices to the Internet	Page 37
Route	Configure the IP communication route that the AirStation uses	Page 38
<b>Wireless Config</b>		
WPS	WPS settings and status	Page 39
AOSS	AOSS (AirStation One-touch Secure System) settings and status	Page 40
Basic	Configure basic wireless settings	Page 42
Advanced	Configure advanced wireless settings	Page 46
WMM	Set priorities for Wireless Multimedia Extensions (Wi-Fi Multimedia)	Page 47
MAC Filter	Limit access to specific devices	Page 49
Multicast Control	Configure limits on sending unnecessary multicast packets to the wireless LAN port	Page 50
WDS	Configure communication among AirStation	Page 51
<b>Security</b>		
Firewall	Protect your computer from outside intruders	Page 53
IP Filter	Edit IP filters which relates to the packets passing through the LAN side and the Internet side	Page 55
VPN Pass Through	Configure IPv6 passthrough, PPPoE passthrough, and PPTP passthrough	Page 56

LAN Config		
Port Forwarding	Configure port translation and exceptions for games and other programs	Page 57
DMZ	Configure a destination to transfer communication packets without a LAN side destination.	Page 58
UPnP	Configure UPnP (Universal Plug and Play)	Page 59
QoS	Configure priority for packets that require a certain data flow	Page 60
Admin Config		
Name	Configure the AirStation's name	Page 61
Password	Configure the AirStation's login password for access to configuration screens	Page 62
Time/Date	Configure the AirStation's internal clock	Page 63
NTP	Configure the AirStation to synchronize with an NTP server to automatically set the AirStation's internal clock	Page 64
Access	Configure access restrictions to the AirStation's configuration screens	Page 65
Log	Configure a syslog server to manage the AirStation's logs	Page 66
Save/Restore	Save or restore the AirStation's configuration from a configuration file	page 67
Initialize/Restart	Initialize the AirStation or reboot it	Page 68
Update	Update the AirStation's firmware	Page 69
Diagnostic		
System Info	View current system information for the AirStation	Page 70
Logs	Check the AirStation's logs	Page 72
Packet Info	View all packets transferred by the AirStation	Page 73
Client Monitor	View all devices currently connected to the AirStation	Page 74
Ping	Test the AirStation's connection to other devices on the network	Page 75
Logout		
Click this to log out of the AirStation's configuration screens		

## Configuration Menu (Bridge Mode)

The menu structure during a bridge mode is the following. Please refer to respective page for explanations regarding to each item.


Main screen	Descriptions	Page
<b>LAN Config</b>		
LAN	Configure LAN side ports and devices	Page 34
Route	Configure the IP communication route that the AirStation uses	Page 38
<b>Wireless Config</b>		
WPS	WPS settings and status	Page 39
AOSS	AOSS (AirStation One-touch Secure System) settings and status	Page 40
Basic	Configure basic wireless settings	Page 43
Advanced	Configure advanced wireless settings	Page 46
WMM	Set priorities for Wireless Multimedia Extensions (Wi-Fi Multimedia)	Page 47
MAC Filter	Limit access to specific devices	Page 49
Multicast Control	Configure limits on sending unnecessary multicast packets to the wireless LAN port	Page 50
WDS	Configure communication among AirStation	Page 51
<b>Admin Config</b>		
Name	Configure the AirStation's name	Page 61
Password	Configure the AirStation's login password for access to configuration screens	Page 62
Time/Date	Configure the AirStation's internal clock	Page 63
NTP	Configure the AirStation to synchronize with an NTP server to automatically set the AirStation's internal clock	Page 64
Access	Configure access restrictions to the AirStation's configuration screens	Page 65
Log	Configure a syslog server to manage the AirStation's logs	Page 66
Save/Restore	Save or restore the AirStation's configuration from a configuration file	page 67
Initialize/Restart	Initialize the AirStation or reboot it	Page 68
Update	Update the AirStation's firmware	Page 69
<b>Diagnostic</b>		
System Info	View current system information for the AirStation	Page 70

Logs	Check the AirStation's logs	Page 72
Packet Info	View all packets transferred by the AirStation	Page 73
Client Monitor	View all devices currently connected to the AirStation	Page 74
Ping	Test the AirStation's connection to other devices on the network	Page 75
Logout		
Click this to log out of the AirStation's configuration screens		



# Setup

The home page of the configuration screen. You can verify settings and the status of the AirStation here.

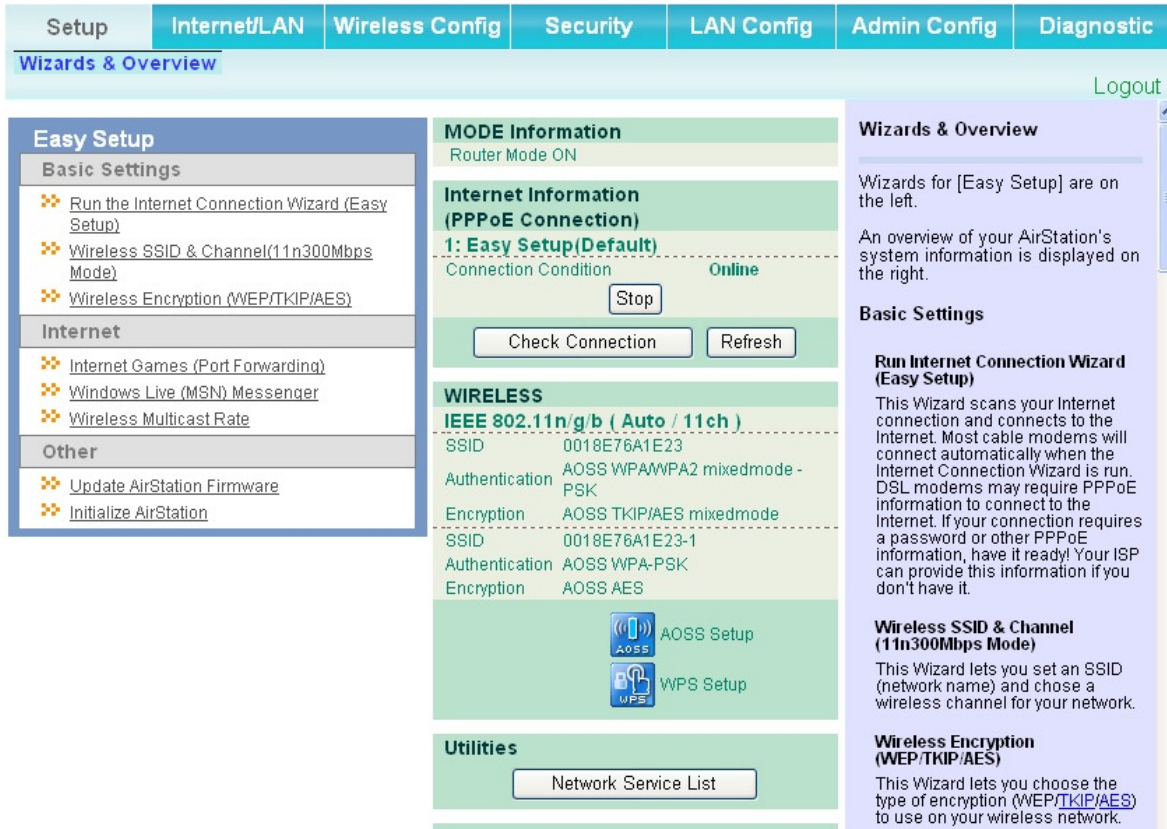

Parameter	Meaning
Internet/LAN (LAN Config)	Displays the configuration screen for the Internet port and LAN ports.
Wireless Config	Click this button to display the configuration screen for wireless settings.
Security	Click this button to display the configuration screen for security.
LAN Config	Click this button to display the configuration screen to open ports for games and applications.

---


<b>Parameter</b>	<b>Meaning</b>
Admin Config	Click this button to display the configuration screen which is related to the administration of the AirStation.
Diagnostic	Click this button to display the status of the AirStation.
Easy Setup	Enable you to configure the AirStation easily such as an encryption method of the wireless signal or changing a wireless channel.
Internet Information	Displays the current information where the AirStation is connected on the Internet side.
Check Connection	Clicking this button to check if the AirStation is connected to the Internet properly.
Refresh	Clicking this button to refresh the screen which is currently displayed.
WIRELESS	Displays the current wireless settings.
AOSS	Click this button to display the AOSS configuration screen.
WPS	Click this button to display the WPS configuration screen.
Network Service List	Displays the list of the network devices for which information is provided from the network on the LAN-side.
Language	Enable you to select the language you use.
Logout	Logout from the configuration screen of the AirStation. If the AirStation does not communicate for 5 minutes, it will logout automatically.

---

# Internet/LAN (LAN Config)

## Internet (Router Mode only)


The screen to configure a port of the Internet side.

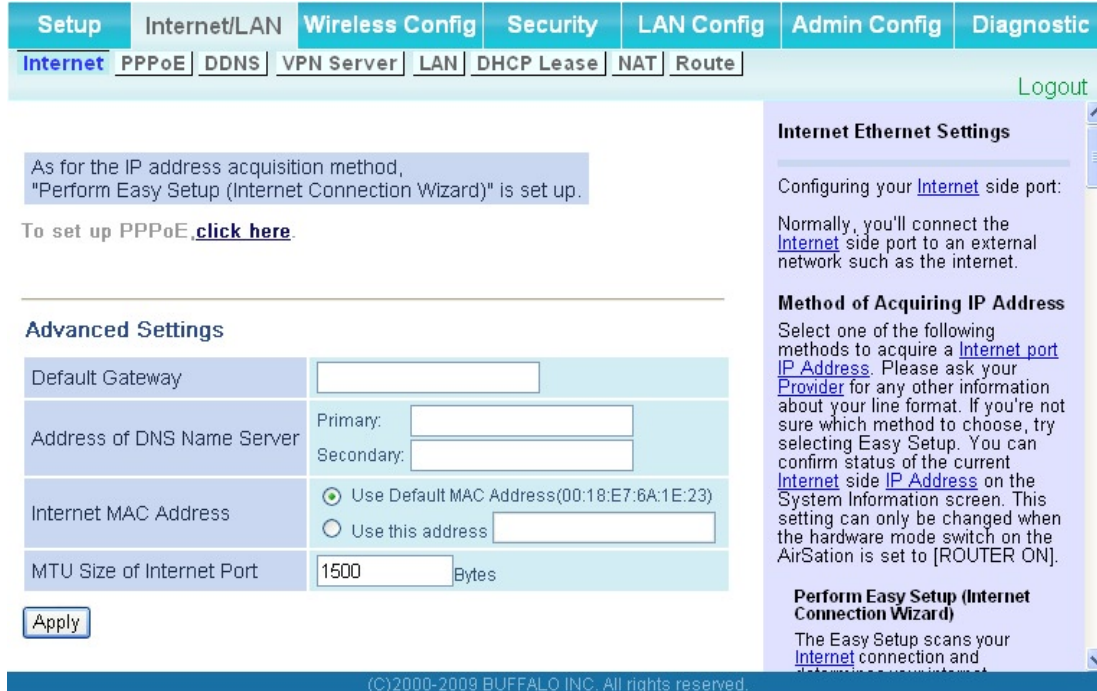

Parameter	Meaning
Method of Acquiring IP Address	Specify how the Internet side IP address is obtained.
Default Gateway	Configure an IP address for the default gateway.
Address of DNS Name Server	Specify an IP address of the DNS server.
Internet MAC Address	Configure the Internet side MAC address. Note: Configuring an improper MAC address may make the AirStation unusable. Change this setting at your own risk.
MTU size of Internet Port	Configure the MTU value of the Internet port from the range of 578 to 1500 bytes.

## PPPoE (Router Mode only)

The screen to configure PPPoE settings.

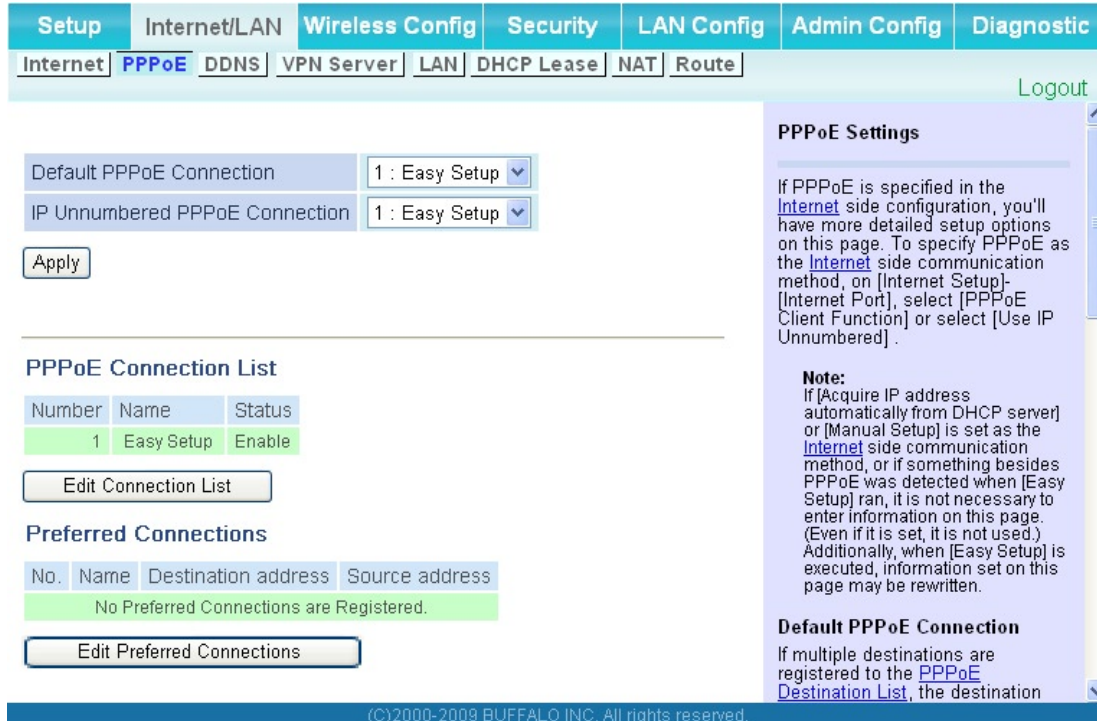

Parameter	Meaning
Default PPPoE Connection	If you have registered multiple connection destinations in PPPoE Connection List, connection destination selected here have priority. You need to configure the route to which PPPoE is connected to if you don't use the default setting.
IP Unnumbered PPPoE Connection	Select the destination from the PPPoE Connection List which is used when specifying "Use IP Unnumbered" in Method of Acquiring IP Address (page 26).
PPPoE Connection List	Edit PPPoE destination. You can register up to 5 sessions.
"Edit Connection List"	Click this button to display the screen to edit the settings of destination.

Parameter	Meaning
PPPoE Connection No.*-Add	<p>This is displayed when clicking "<i>Edit Connection List</i>".</p> <p><b>Name of Connection</b> Enter the name to identify the connected destination. You may enter up to 32 alphanumeric characters and symbols.</p> <p><b>User Name</b> Set the user name which is specified by your provider, used for a PPPoE certification. You may enter up to 32 alphanumeric characters and symbols.</p> <p><b>Password</b> Set the password specified by your provider for PPPoE certification. You may enter up to 32 alphanumeric characters and symbols.</p> <p><b>Service Name</b> Fill in this field only when your provider specifies a Service Name. Leave blank otherwise. You may enter up to 32 alphanumeric characters and symbols.</p> <p><b>Connection Type</b> Specifies the timing for the AirStation to connect to your provider.</p> <p><b>Automatic disconnection</b> Set time to disconnect after communication is stopped when the connection method is set to "<i>Connect on Demand</i>" or "<i>Manual</i>". You can enter up to 1440 minutes.</p> <p><b>Authorization</b> Configure an authorization method with a provider.</p> <p><b>MTU Size</b> Configure MTU value in the range of 578 to 1492, which is used for communication on PPPoE.</p> <p><b>MRU Size</b> Configure MRU (Maximum Receive Unit) value in the range of 578 to 1492, which is used for communication on PPPoE.</p>
Preferred Connections	Displays information you have set regarding to the connection destination route.
[Edit Preferred Connections]	Click this button to display the screen to edit the settings of connection destination route.

Parameter	Meaning
PPPoE Connection No. *-Add	<b>Keep Alive</b> When enabling Keep Alive, the AirStation issues LCP echo request in order to maintain the connection with the PPPoE server once a minute. If the server does not respond more than 6 minutes the line is recognized as disconnected and the AirStation will terminate the connection. If a PPPoE connection is often disconnected, the server may not reply to Keep Alive. Set this to "Disable."
Preferred PPPoE Connection -Add	This is displayed when clicking " <i>Edit Preferred Connections</i> ". <b>Name</b> The name of destination to connect by PPPoE if " <i>Destination address</i> " and " <i>Source address</i> " of the communication match. Select the destination registered to PPPoE Connection List. <b>Destination address</b> Destination address to communicate. When communicating to this destination address, the AirStation will communicate with " <i>Name of Connection</i> ". <b>Source address</b> Source address to communicate. When communicating from this source address, the AirStation will communicate with " <i>Name of Connection</i> ".

---

## DDNS (Router Mode only)

The screen to configure Dynamic DNS settings.

Dynamic DNS Service:

Current Dynamic DNS Information	
Internet Side IP Address	222.4.67.69
Domain Name	Disabled
Status	Disabled

**Dynamic DNS Settings**

Dynamic DNS Setup. Before configuring this settings, you need to sign up for a dynamic DNS service provider.

**Dynamic DNS Service**

Select a dynamic DNS service provider. You can select "DynDNS" or "TZO".

- DynDNS
- TZO

The following values are different depending on your dynamic DNS service provider.

(C)2000-2009 BUFFALO INC. All rights reserved.

Parameter	Meaning
Dynamic DNS Service	Select a provider (DynDNS or TZO) for Dynamic DNS.
User Name * Only when DynDNS is selected	Enter the user name which is registered to the Dynamic DNS service. You may enter up to 64 alphanumeric characters and symbols.
Password * Only when DynDNS is selected	Enter the user name which is registered to the Dynamic DNS service. You may enter up to 64 alphanumeric characters and symbols.
Host Name * Only when DynDNS is selected	Enter the host name which is registered to the Dynamic DNS service. You may enter up to 255 alphanumeric characters, hyphens, and periods.
Email Address * Only when selecting TZO	Enter the email address which is registered to the Dynamic DNS service. You may enter up to 64 alphanumeric characters and symbols.
TZO Key * Only when selecting TZO	Enter the TZO Key which is registered to the Dynamic DNS service. You may enter up to 64 alphanumeric characters and symbols.

<b>Parameter</b>	<b>Meaning</b>
Domain Name * Only when selecting TZO	Enter the domain name which is registered to the Dynamic DNS service. You may enter up to 255 alphanumerical characters, hyphens, and periods.
IP Address Update Period	Specifies the period to notify the dynamic DNS service provider of the current IP address. When DynDNS is selected, set it between 0 and 35 days. When TZO is selected, set it between 0 and 99 days. If 0 (zero) day is set, no periodic update is performed.
Internet Side IP Address	The WAN-side IP address of the AirStation's Internet port. This address is sent to the dynamic DNS service provider.
Domain Name	The domain name assigned by the dynamic DNS Service provider. The AirStation can be accessed from the Internet using this domain name.
Status	Display the status of dynamic DNS service.

---



## VPN server (Router Mode Only)

Configure the VPN server.

Setup	Internet/LAN	Wireless Config	Security	LAN Config	Admin Config	Diagnostic	
Internet	PPPoE	DDNS	VPN Server	LAN	DHCP Lease	NAT	Route

Logout

**The LAN side IP address is set to 192.168.11.1.  
Therefore, a PC connected to BUFFALO's router may be unable to access to the PC on the LAN.  
The LAN side IP address and DHCP IP address pool should be changed.**

Auto Input	Generate Recommended IP Address	
LAN Side IP Address	IP Address	192.168.11.1
	Subnet Mask	255.255.255.0
DHCP Server Function	<input checked="" type="checkbox"/> Enable	
DHCP IP Address Pool	192.168.11.2	for up to 64 Address(es)
PPTP Server Function	<input type="checkbox"/> Enable	
Authorization Type	MS-CHAPv2 (40/128-bit Encryption)	

**[Advanced Settings]**

Server IP Address	<input checked="" type="radio"/> Auto <input type="radio"/> Manual	<input type="text"/>
Client IP Address	<input checked="" type="radio"/> Auto <input type="radio"/> Manual	<input type="text"/> for up to 5 address(es)
DNS Server IP Address	<input checked="" type="radio"/> LAN IP address of the AirStation <input type="radio"/> Manual <input type="radio"/> Do Not Specify	<input type="text"/>
WINS Server IP Address	<input type="text"/>	
MTU/MRU value	1396	

---

**PPTP User List**

User Name	Connection Condition	IP Address	Operation
No registered users			

**VPN Server Settings**

By using the PPTP server function it is possible to access the AirStation from the Internet and the LAN from a Windows PPTP client.

**Note**  
If using GRE protocol (protocol no.47) and no.1732 TCP port filtering, then this function may not work correctly.  
Also, be aware that if a router on the Internet side has these protocols blocked, then this function cannot be used.

**Auto Input**  
Click this button to generate a random IP address with a small possibility of overlapping with IP addresses of other Buffalo routers.

**LAN Side IP Address**  
Configure the AirStation's LAN IP Address. The default is 192.168.11.1. If you want to connect the AirStation to an existing LAN, specify a unique, unused IP Address from the LAN's range of IP addresses.

**Subnet Mask**  
Select the AirStation's LAN side Subnet Mask. The default is 255.255.255.0. If you want to connect the AirStation to an existing LAN, specify the Subnet Mask the LAN uses.

**DHCP Server Function**  
Enable the DHCP Server here. The default is enabled. If there is another DHCP server on the network, one DHCP server must be disabled or the IP ranges must be changed to avoid conflicts caused by overlapping DHCP scopes. If DHCP Server is enabled, confirm DHCP IP Address Pool doesn't overlap existing IP Addresses in the LAN segment.

**DHCP IP Address Pool**  
This determines the IP Address range from which IP addresses will be distributed to DHCP clients (both wired and wireless). Enter the starting IP address and the number of addresses to be

(C)2000-2009 BUFFALO INC. All rights reserved.


---

<b>Parameter</b>	<b>Meaning</b>
Auto Input	Click to generate a random IP address.
LAN Side IP Address	Set a LAN side IP address and subnet mask.
DHCP Server	Enable or disable the DHCP server, which assigns IP addresses automatically.
DHCP IP Address Pool	Configure the range of IP addresses to be assigned by the DHCP server and IP addresses to be excluded from that range. Values from 0-253 may be entered.
PPTP Server	Enable to use a PPTP server.
Authorization Type	Select the authentication method for PPTP connection.
Server IP Address	Select the server IP address.
Client IP Address	Select the IP address range.
DNS Server IP Address	Set the DNS server IP address for the DHCP server to issue to clients.
WINS Server IP Address	Set the WINS server IP address for the DHCP server to issue to clients.
[Edit User Information]	Click to edit user information.
User Name	Enter the user name to connect to the PPTP server. You may enter up to 16 alphanumerical characters and symbols.
Password	Enter the password to connect to the PPTP server. You may enter up to 16 alphanumerical characters and symbols.
Method of Acquiring IP Address	Select the method to be used to assign the IP address is assigned to the PPTP client.
PPTP User List	Displays the PPTP connection user information.

---

# LAN

The screen to configure a port of the LAN side.

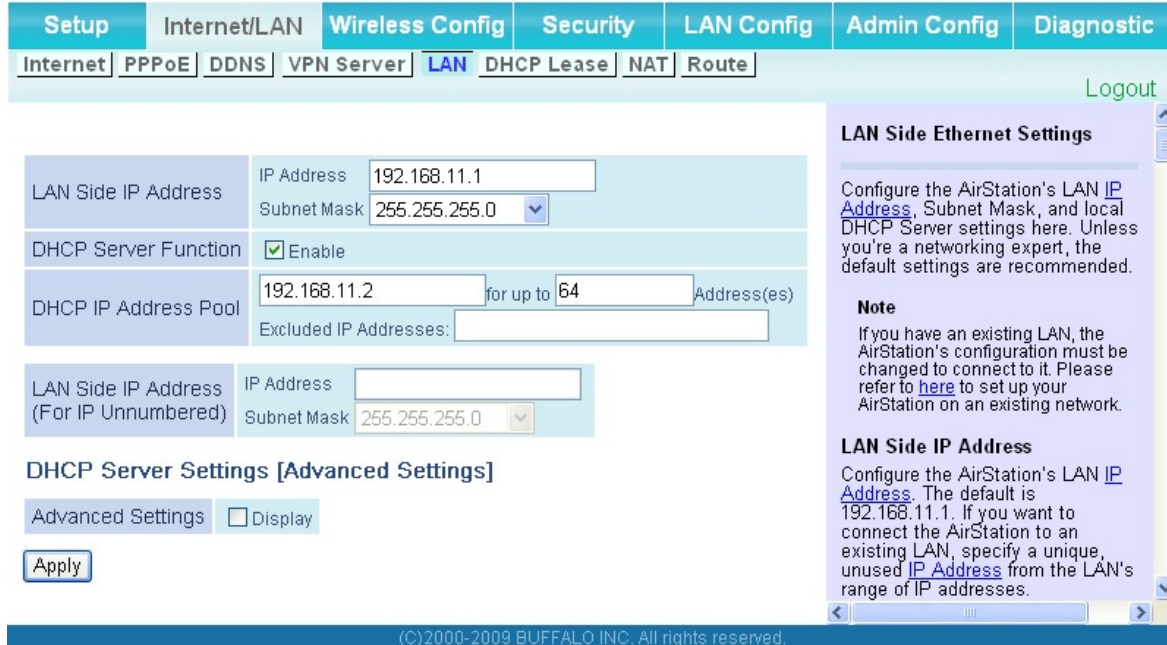

Parameter	Meaning
LAN Side IP Address	Set a LAN side IP address and subnet mask.
DHCP Server Function * Router Mode only	Enable or disable the DHCP server, which assigns IP addresses automatically.
DHCP IP Address Pool * Router Mode only	Configure the range of IP addresses to be assigned by the DHCP server and IP addresses to be excluded from that range. Values from 0-253 may be entered.
LAN Side IP Address (For IP Unnumbered) * Router Mode only	Set a LAN side IP address for IP unnumbered. Note: A PC with a normal LAN side IP address and a PC with an LAN side IP address for IP Unnumbered cannot communicate each other.
Advanced Settings * Router Mode only	Select Display to display the advanced settings options for the DHCP server.
Lease Period * Router Mode only	Set the effective period of an IP address assigned by the DHCP server. Up to 999 hours may be entered.


---

<b>Parameter</b>	<b>Meaning</b>
Default Gateway * Router Mode only	Set the default gateway IP address for the DHCP server to issue to clients.
DNS Servers * Router Mode only	Set the dDNS server IP address for the DHCP server to issue to clients.
WINS Server * Router Mode only	Set the WINS server IP address for the DHCP server to issue to clients.
Domain Name * Router Mode only	Set the domain name for the DHCP server to issue to clients. You may enter up to 127 alphanumeric characters, hyphens, and periods.
Default Gateway * Bridge Mode only	Set the default gateway IP address.
DNS Server Address * Bridge Mode only	Set the DNS server IP address.

---

## DHCP Lease (Router Mode only)

The screen to configure DHCP lease.

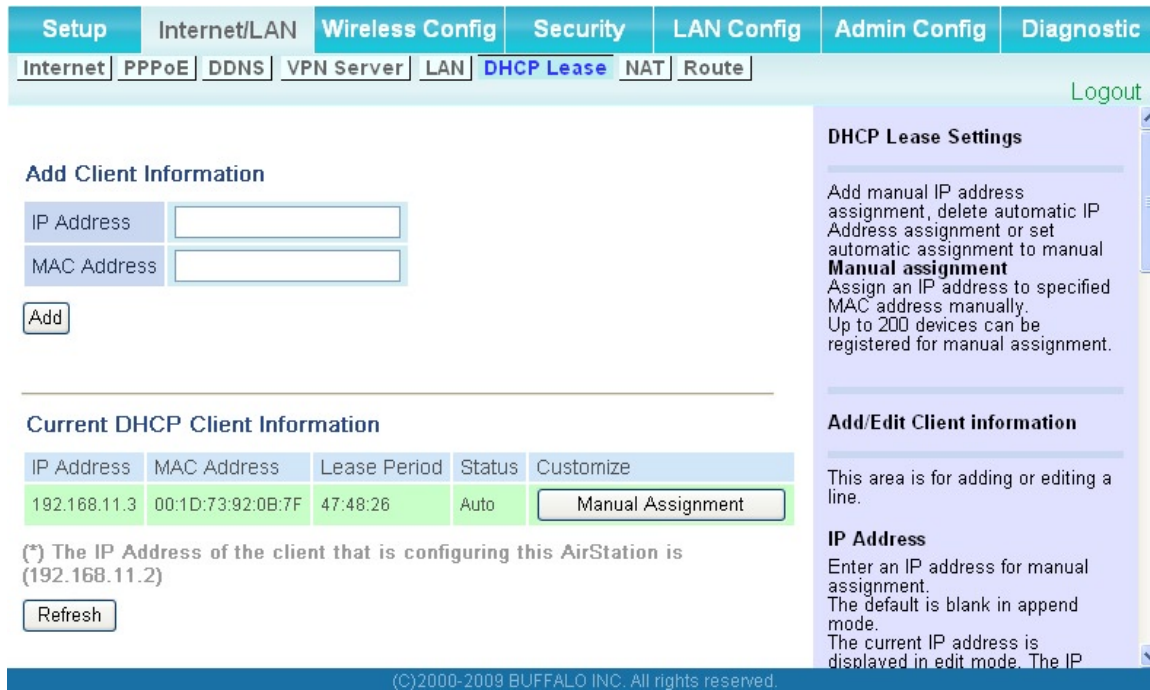

Parameter	Meaning
IP Address	Enter an IP address to lease manually. The IP address should be from the same subnet as the DHCP scope, but not be within the range that DHCP is assigning to other devices.
MAC Address	Enter the MAC address which identifies the client.
Current DHCP Client Information	Displays information for current leases. An IP address which is leased automatically can be changed to be leased manually by clicking "Manual Assignment".

## NAT (Router Mode only)

The screen to configure settings relating to the network address translation function which is used to connect the LAN side to the Internet.



Parameter	Meaning
Address Translation	Enable to use Network Address Translation.
Log Output of Deleted Packets	Enable to log deleted packets (such as errors) during address translation.

## Route


The screen to configure the communication IP route that the AirStation uses.

Parameter	Meaning
Destination Address	Adds a destination IP address and subnet mask to a routing table.
Gateway	Adds a gateway address to a routing table.
Metric	The metric is the maximum number of router hops a packet may take on the way to its destination address. Values between 1 and 15 may be entered. The default value is 15.
Routing Information	Manual entries will appear here after being added.

# Wireless Config

## WPS

The screen to see the detailed settings and status of WPS.

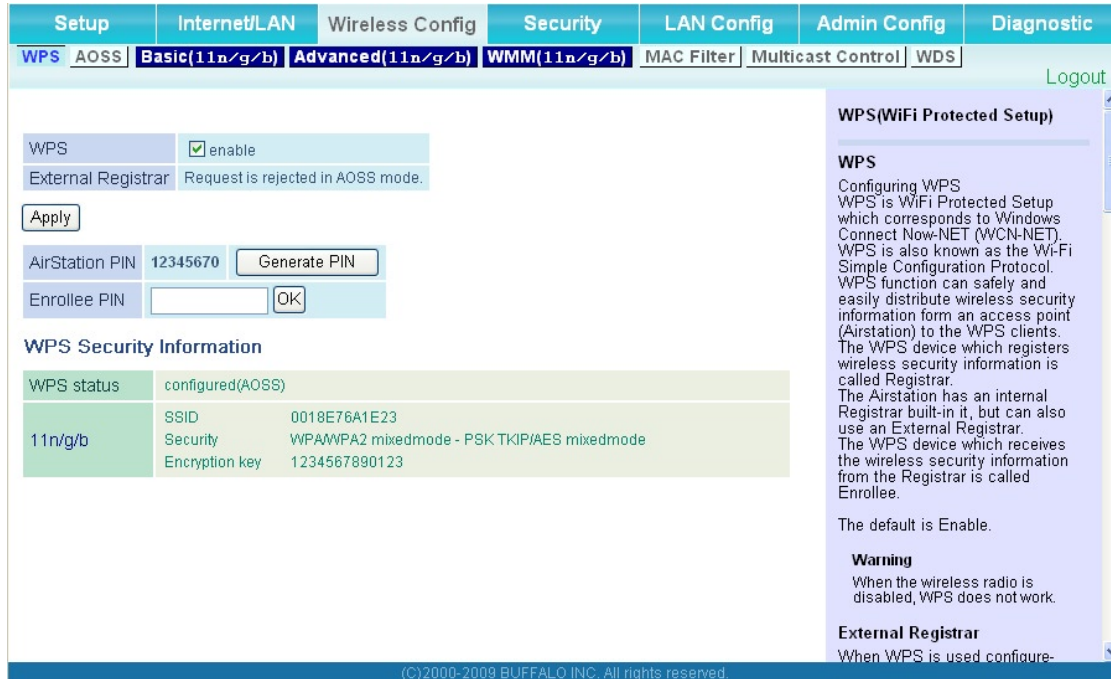

Parameter	Value
WPS	<input checked="" type="checkbox"/> enable
External Registrar	Request is rejected in AOSS mode.
AirStation PIN	12345670
Enrollee PIN	

WPS Security Information	
WPS status	configured(AOSS)
11n/g/b	SSID 0018E76A1E23 Security WPAWPA2 mixedmode - PSK TKIP/AES mixedmode Encryption key 1234567890123

**WPS(WiFi Protected Setup)**

**WPS**  
 Configuring WPS  
 WPS is WiFi Protected Setup which corresponds to Windows Connect Now-NET (WCN-NET). WPS is also known as the Wi-Fi Simple Configuration Protocol. WPS function can safely and easily distribute wireless security information from an access point (Airstation) to the WPS clients. The WPS device which registers wireless security information is called Registrar. The Airstation has an internal Registrar built-in it, but can also use an External Registrar. The WPS device which receives the wireless security information from the Registrar is called Enrollee.  
 The default is Enable.

**Warning**  
 When the wireless radio is disabled, WPS does not work.

**External Registrar**  
 When WPS is used configure-

(C)2000-2009 BUFFALO INC. All rights reserved.

### Parameter

### Meaning

WPS	Enable to use WPS automatic configuration.
External Registrar	Enable to accept the external configure requests from other WPS devices. Note: External configure requests will not be accepted if AOSS is in use.
AirStation PIN	Displays the PIN code of the AirStation. Clicking "Generate PIN" will generate a new PIN code. This code can be entered into other wireless devices that support WPS.
Enrollee PIN	Enter the PIN code for the other wireless device and click "OK".
WPS status	Displays "configured" if all available wireless bands are configured. Displays "unconfigured" if at least one wireless band is unconfigured.



# AOSS

The screen to see the detailed settings and status of AOSS.

**Setup** | **Internet/LAN** | **Wireless Config** | **Security** | LAN Config | Admin Config | Diagnostic

WPS | **AOSS** | Basic(11n/g/b) | Advanced(11n/g/b) | WMM(11n/g/b) | MAC Filter | Multicast Control | WDS | Logout

**AOSS Settings - Edit AOSS Client Information**

Encryption Type of Exclusive SSID for WEP: 802.11n/g/b Stop

Encryption level expansion function: 802.11n/g/b Enabled

Dedicated WEP SSID isolation: 802.11n/g/b Disabled

AOSS Button on the AirStation Unit:  Enable

**Current Encryption Information 802.11n/g/b**

Encryption Type: WPA-PSK-AES (Now in use)

SSID: 0018E76A1E23-1

Encryption key: 1234567890123

Encryption Type: WPAWPA2-PSK-mixed (Now in use)

SSID: 0018E76A1E23

Encryption key: 1234567890123

Encryption Type: WEP128

SSID: 0018E76A1E23-3

Encryption key: 1234567890123 (Sending Key)

Encryption Type: WEP64

SSID: 0018E76A1E23-4

Encryption key: 12345 (Sending Key)

Buttons: Random | KEY base | Reset | Apply

**AOSS Client Information**

Client Information	MAC Address	Encryption Type	Wireless	Connection Setting
WLI-UC-G30xN	00:1D:73:92:0B:7F	WEP64/WEP128 WPA-PSK-TKIP/WPA-PSK-AES	802.11n/g/b	Allow

Edit AOSS Client Information

**AOSS Ethernet Converter Information**

Client Information	MAC Address	Encryption Type

**AOSS (AirStation One-Touch Secure System)**

AOSS is Buffalo's unique technology for quickly forming a secure wireless connection. You can see AOSS's configuration and status from this screen.

**[Start AOSS] button**

Click this button to start AOSS. The AOSS button on top of the router works the same as this button. Refer to [How to use AOSS](#) for more details.

**[Disable AOSS] button**

This button appears when AOSS is enabled. Click this button to disable AOSS. Connections to wireless clients will be terminated, AOSS information removed, and Encryption Type reset to its default value, AES. Current Encryption Information will also be removed. Wireless Setting and Wireless Security are enabled in Advanced Settings when AOSS is disabled.

**Note:**

- Once the AOSS button is pressed, other operations can't be started until AOSS is finished. If the AirStation can't find a wireless client after three minutes, the AirStation's status returns to its previous state.
- Up to 24 wireless clients may be connected through AOSS.
- By default, AOSS is functional but does not initiate a connection unless started manually by pushing the AOSS button, either here or on the top of the router.
- Use AirStation's System Information page to manually configure a wireless client that doesn't support AOSS.
- When wireless security is configured, it's security information is succeeded.

In the following cases, the setting of wireless security is not succeeded and AOSS returns error.



- Any blank is contained in SSID.
- WPA-PSK is input with 'hexadecimal 64 characters'.
- Any blank is contained in WPA-PSK.

In the following cases, the setting of wireless security is not succeeded and AOSS generates new encryption settings.

- Wireless Authentication is "WPA2-PSK",

If Wireless Authorization is "WPA/WPA2 mixedmode - PSK" AOSS passes encryption key to WPA-PSK-TKIP and configures initial level to WPA-PSK-TKIP.

(C)2000-2009 BUFFALO INC. All rights reserved.

Parameter	Meaning
	Initiates AOSS automatic wireless configuration. Click this, then press or click the AOSS button on your AOSS-compatible wireless client. Repeat for additional AOSS clients.
	Click this button to disconnect AOSS connections. Note: If AOSS connections are disconnected, the SSID and encryption keys will be restored to their most recent settings before using AOSS.
Encryption Type of Exclusive SSID for WEP	You may allow a separate SSID specifically for WEP connections. If "disabled" is selected, then clients will not be able to connect with WEP.
Encryption level expansion function	Expands security method from TKIP to WPA/WPA2-PSK-mixed mode.
Dedicated WEP SSID isolation	Set a separate SSID and network segment specifically for WEP connections. Devices connected with WEP will not be able to communicate with devices connected using AES/TKIP. All connected devices will be able to communicate with the internet.
AOSS Button on the AirStation Unit	Determine whether configure AOSS or not when the physical AOSS button is pressed.
Current Encryption Information * AOSS Connection only	Displays the encryption type, SSID, an encryption key configured by AOSS.
[Random]	Click to enter random values for SSID, encryption key, and other settings.
[KEY base]	Click to return the SSID, encryption key, and other wireless settings to the values on the case sticker.
[Reset]	Click to return the SSID, encryption key, and other wireless settings to their previous values.
AOSS Client Information* * AOSS Connection only	Displays AOSS clients connected to the AirStation and information of the devices which are wirelessly communicated.
AOSS Ethernet Converter Information* * AOSS Connection only	Displays information about ethernet converters connected to the AirStation via AOSS.

## Basic

The screen to configure a basic wireless settings.

Parameter	Meaning
Wireless Radio	Determines whether to allow wireless communication. If this is unchecked, then no wireless connections will be allowed.
Wireless Channel	Sets a channel (a range of frequencies) used for wireless connections. Available range of the channel is 1-11. With Auto Channel selected, the AirStation will automatically use the best available channel.
300Mbps Mode (WHR-HP-G300N) 150Mbps Mode (WHR-HP-GN)	300/150 Mbps mode uses twice the normal frequency range, 40 MHz instead of 20 MHz. In uncongested areas this can increase performance. To use 300/150 Mbps mode, set the Bandwidth to 40 MHz and choose an Extension Channel. Note: If using Auto Channel for the wireless channel, then the Extension Channel is set automatically.

<b>Parameter</b>	<b>Meaning</b>
Broadcast SSID	If "Allow" is checked, then the AirStation will respond to SSID searches from wireless devices by broadcasting its SSID. If "Allow" is unchecked, then the AirStation ignore SSID searches from wireless devices.
[Use Multi Security function] [Do not use Multi Security function]	Clicking "Use Multi Security function" will enable the Multi Security function, allowing the use of multiple SSIDs, each with different wireless security settings. Clicking "Do not use Multi Security function" will disable the Multi Security function. The AirStation will then allow one SSID and one type of wireless security.  Note: When using Multi Security, you need to enable at least one of the following SSID1, SSID2, or SSID3.
SSID1	Multi Security SSID1 can use WPA-PSK-TKIP or WPA/WPA2-Mixed for wireless security.
SSID2	Multi Security SSID2 can use WPA-PSK-AES for wireless security.
SSID3	Multi Security SSID3 can use WEP for wireless security.
Separate feature	When "Enabled", wireless devices connected to the AirStation can communicate only with the Internet side, not with each other.
SSID	Set SSID using 1-32 alphanumeric character (s).
Wireless authentication	Specifies an authentication method used when connecting to a wireless device.

Parameter	Meaning
Wireless encryption	<p>Select a type of data encryption for wireless communication from the following options:</p> <p><b>No encryption</b> Data is transmitted without encryption. Avoid this option since any communication may be intercepted. "No encryption" can be selected only when "No authentication" is selected for Wireless authentication.</p> <p><b>WEP</b> WEP is a common encryption method supported by most devices. Use an encryption key to communicate with a wireless device. WEP can only be selected when "No authentication" is selected for Wireless authentication.</p> <p><b>TKIP</b> TKIP is an encryption method which is more secure than WEP, but slower. Use an pre-shared-key to communicate with a wireless device. TKIP can be selected only when WPA-PSK or WPA2-PSK is selected for Wireless authentication.</p> <p><b>AES</b> AES is more secure than TKIP, and faster. Use a pre-shared-key to communicate with a wireless device. AES can be selected only when WPA-PSK or WPA2-PSK is selected for Wireless authentication.</p> <p><b>TKIP/AES mixed mode</b> TKIP/AES mixed mode allows both TKIP and AES authentication and communication. TKIP/AES mixed mode can be selected only when WPA/WPA2 mixed mode - PSK is selected for Wireless authentication.</p>
WPA-PSK (Pre-Shared Key)	<p>Enter a pre-shared key for use with wireless authentication.</p> <p>* Use 8 to 63 alphanumeric characters (case-sensitive) for a preshared key when you select character type as an input method. Enter 64 digits using 0 to 9 and a to f (not case-sensitive) when you select hexadecimal type as an input method.</p>
Rekey interval	<p>Set the interval between 0 and 1440 (minutes) to update a communication encryption key.</p>


---

<b>Parameter</b>	<b>Meaning</b>
Setup WEP encryption key	Enter an encryption key to encrypt wireless data. * Use 5 or 13 alphanumeric characters (case-sensitive) for an encryption key when you select character type as the input method. Enter 10 or 26 digits using 0 to 9 and a to f (not case-sensitive) when you select hexadecimal type as the input method.

---

## Advanced

The screen to configure the advanced wireless settings.

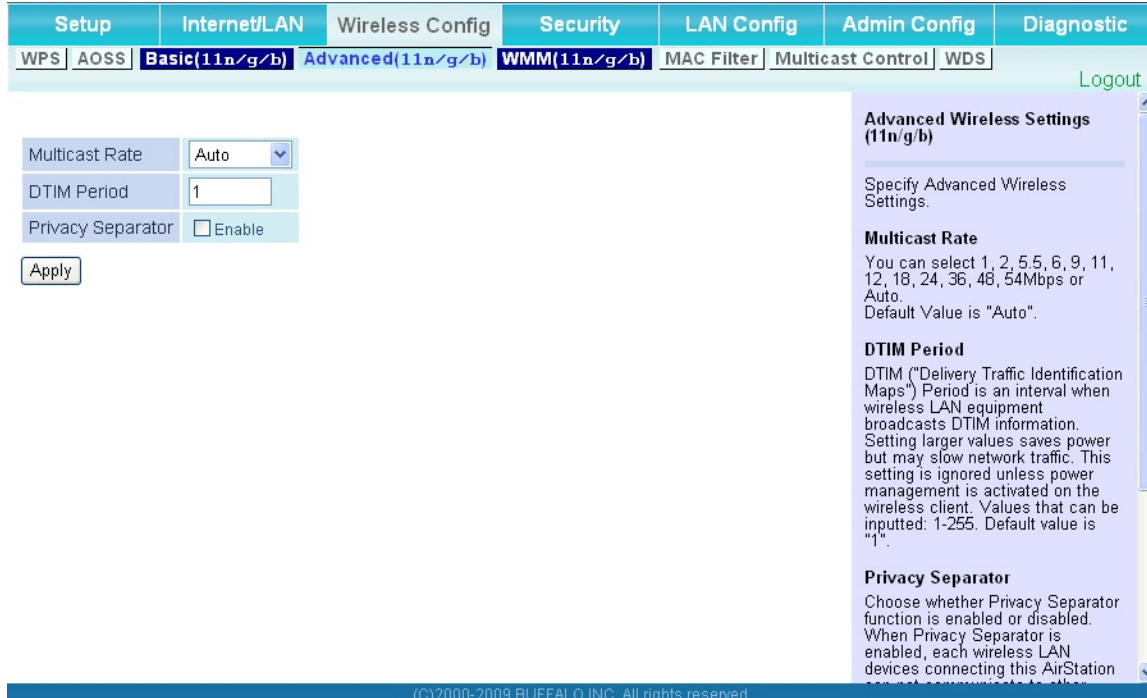

Parameter	Meaning
Multicast Rate	Set the communication speed of multi-cast packets.
DTIM Period	Set the beacon responding interval (1 -255) which is notified to a wireless device. This setting is effective only when the power management feature is enabled on a wireless device.
Privacy Separator	If enabled, the Privacy Separator blocks communication between wireless devices connected to the AirStation. Wireless devices will be able to connect to the Internet but not with each other. Devices that are connected to the AirStation with wired connections will still be able to connect to wireless devices normally.

# WMM

The screen to set the priorities for specific communications the AirStation performs.

Setup	Internet/LAN	Wireless Config	Security	LAN Config	Admin Config	Diagnostic	
WPS	AOSS	Basic(11n/g/b)	Advanced(11n/g/b)	WMM(11n/g/b)	MAC Filter	Multicast Control	WDS

Logout

### WMM-EDCA Parameters

Priority	Parameter	For AP	For STA
AC_BK(Low)	CWmin:	15	15
	CWmax:	1023	1023
	AIFSN:	7	7
	TXOP Limit:	0	0
	Admission Control:	----	Disable
AC_BE(Normal)	CWmin:	15	15
	CWmax:	63	1023
	AIFSN:	3	3
	TXOP Limit:	0	0
	Admission Control:	----	Disable
AC_VI(High)	CWmin:	7	7
	CWmax:	15	15
	AIFSN:	1	2
	TXOP Limit:	94	94
	Admission Control:	----	Disable
AC_VO(Highest)	CWmin:	3	3
	CWmax:	7	7
	AIFSN:	1	2
	TXOP Limit:	47	47
	Admission Control:	----	Disable

Apply

**WMM Settings (11n/g/b)**

Prioritized AirStation communication for specific transactions. This settings provides some real time communication, which can help improve the quality of VOIP or other streaming protocols.

---

**WMM-EDCA Parameters**

**WMM Settings (11n/g/b)**

Prioritized AirStation communication for specific transactions. This settings provides some real time communication, which can help improve the quality of VOIP or other streaming protocols.

---

**WMM-EDCA Parameters**

It is usually not necessary to change this value.

**Priority**

The priority is ranked (Highest)8 : (High)4 : (Normal)2 : (Low)1 for each packet.

**Parameter**

**CWmin, CWmax**

The maximum and minimum value for the contention window. The contention window is used to control the frame collision avoidance system in IEEE802.11. Values that can be inputted: 1-32767.

©2000-2009 BUFFALO INC. All rights reserved.




---

Parameter	Meaning
WMM-EDCA Parameters	<p data-bbox="641 327 1443 394">You don't usually need to change these settings. Using the default settings is recommended.</p> <p data-bbox="641 426 740 457"><b>Priority</b></p> <p data-bbox="662 464 1455 569">The following priorities may be applied to individual transmission packets: (Highest) 8, (High) 4, (Normal) 2, and (Low) 1. From the queue, these packets are processed in order of priority.</p> <p data-bbox="641 600 846 632"><b>CWmin, CWmax</b></p> <p data-bbox="662 638 1443 814">The maximum and minimum value of the contention window. The contention window is used in the frame collision avoidance structure performed in IEEE802.11, and generally the smaller the value in the window, the higher the probability that the queue obtains the right to send.</p> <p data-bbox="641 846 721 877"><b>AIFSN</b></p> <p data-bbox="662 884 1455 1024">The interval to send frames. The unit of the AIFSN is a slot, just as the window defined by CWmin and CWmax is. The smaller the interval of sending frames, the faster the algorithm can restart. As a result, the priority of the queue is higher.</p> <p data-bbox="641 1056 786 1087"><b>TXOP Limit</b></p> <p data-bbox="662 1094 1455 1270">The period of time that the queue can use after obtaining the right to send. The unit is 32 ms. The longer this time, the more frames can be sent per right to send. However, the que may interfere with other packet transmissions. If TXOP Limit is set to 0 (zero), only one frame can be sent per right to send.</p> <p data-bbox="641 1302 878 1333"><b>Admission Control</b></p> <p data-bbox="662 1339 1455 1444">Restricts new frames from interfering with a previous queue. New packets are prioritized lower until a queue of them is collected. As the new queue accumulates more packets, its priority increases.</p>

---

## MAC Filter


The screen to configure the access restrictions from wireless devices.

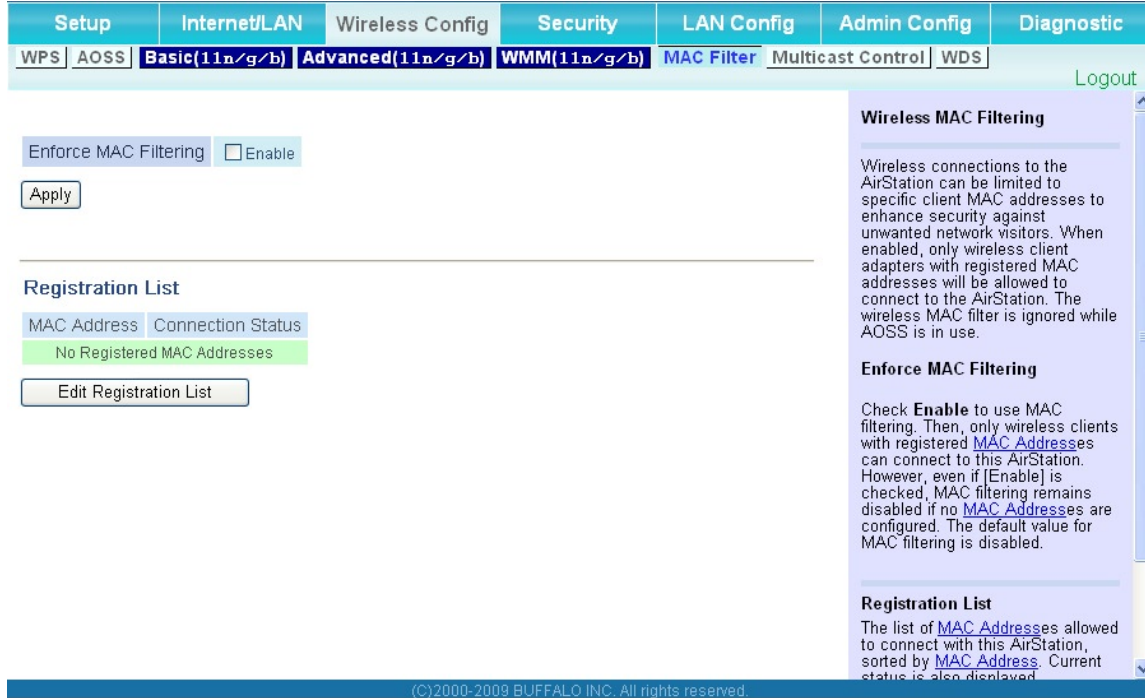

Parameter	Meaning
Enforce MAC Filtering	Enable to restrict wireless connections to devices with registered MAC addresses.
Registration List	Displays the MAC addresses of registered devices which are permitted to connect wirelessly.
[Edit Registration List]	Click this button to add a MAC address of a wireless device to the list of permitted devices.
MAC Addresses to be Registered	Enter a MAC address of a wireless device you permit to connect to the AirStation. Click "Register" to add that MAC address to the list.
List of all clients that are associated with this AirStation	Display the list of all MAC addresses of wireless devices connected to the AirStation.

## Multicast Control

The screen to configure restrictions on unnecessary multicast packets sent to the wireless LAN port.

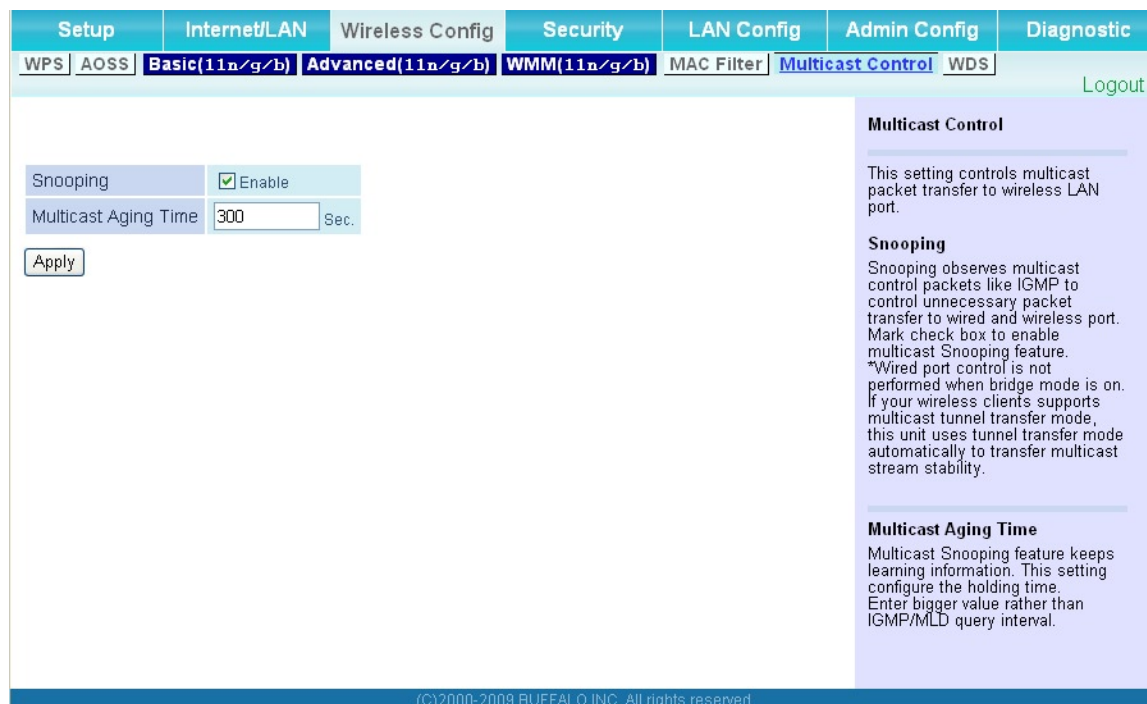

Parameter	Meaning
Snooping	If enabled, snooping supervises multicast administrative packets such as IGMP and restricts unnecessary multicast transfers to wired or wireless ports.
Multicast Aging Time	Set the time to hold the data from multicast snooping in the range of 1 to 3600 (seconds). You need to enter a value which is bigger than the interval of a IGMP/MLD query.

## WDS


The screen to configure WDS settings, which supports communication between AirStation.



Parameter	Meaning
WDS	Check to use WDS connection.
Specify Master/Slave	Define AirStation's role when using WDS connection. <b>Master</b> This AirStation will act as a master of WDS connection. Other AirStations will be connected via this AirStation. <b>Slave</b> The AirStation will be connected to the master AirStation. The SSID of the master AirStation, Wireless Authentication, Encryption for Wireless Signals must be separately configured. <b>Auto</b> Automatically switches Master/Slave mode depending on the surrounding network situation. If the AirStation works as a router, it will always be set to the master automatically. If the Airstation works as a bridge and a DHCP server exists in the network, it will automatically be set to the master . If the AirStation works as a bridge and no DHCP server is available, it will automatically be set to the slave.

Parameter	Meaning
SSID	Configure the Master Airstation's SSID.
[ Search ]	Click this to search the Master AirStation's SSID.
Wireless authentication	Configure the master AirStation's wireless authentication method.
Encryption for wireless	Configure the master AirStation's Encryption method.
WPA-PSK (Pre Shared Key)	Set the master AirStation's Encryption key.


Note: A master AirStation can communicate with two slaves only.  
 A slave AirStation cannot communicate with any AirStations other than its master.

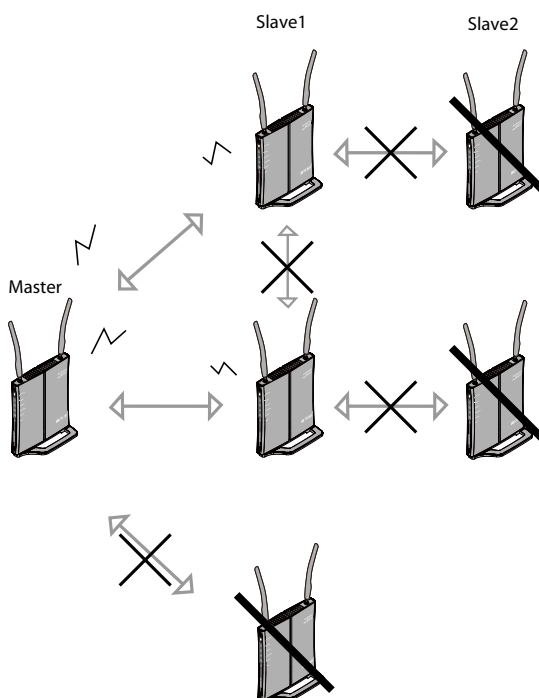

# Security (Router Mode only)

## Firewall (Router Mode only)

The screen to configure firewall features of the AirStation.

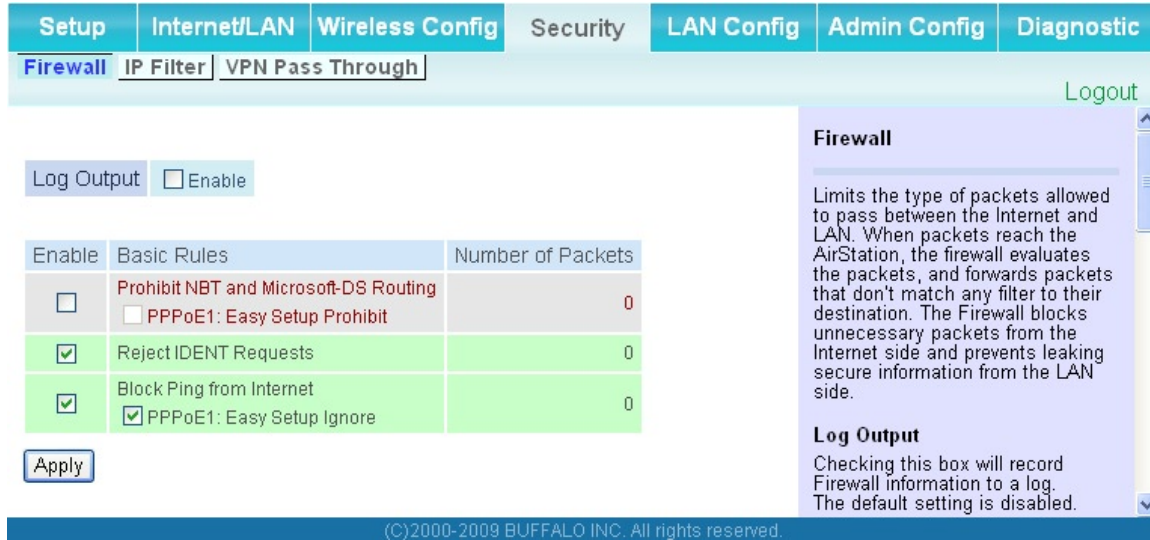

Parameter	Meaning
Log Output	Enable to output a log of firewall activity.
Basic Rules	<p>Enable to use any of the quick filters. Preconfigured quick filters include:</p> <p><b>Prohibit NBT and Microsoft-DS Routing</b></p> <p>When this is enabled, you cannot use the Microsoft network feature from the Internet side to the LAN side and from the LAN side to the Internet. You can configure this with PPPoE if you select "Use PPPoE Client" or "Use IP Unnumbered" in Method of Acquiring IP address (on page 25), or if Easy Setup identified a PPPoE connection during setup.</p>

---

Parameter	Meaning
	<p data-bbox="641 327 932 359"><b>Reject IDENT Requests</b></p> <p data-bbox="662 365 1458 653">Enabling this option will answer IDENT requests from the Internet side with corresponding rejection packets. Enable this option if you experienced slower transfer speed for network application such as sending mail, using ftp or displaying on browser. If you have configured transfer of IDENT requests to the LAN side computer in the address translation settings (DMZ or TCP port:113), that setting has higher priority, and overrides this setting.</p> <p data-bbox="641 684 959 716"><b>Block Ping from Internet</b></p> <p data-bbox="662 722 1458 898">If this is enabled, the AirStation will not respond to pings from the Internet side. You can configure this with PPPoE if you select <i>“Use PPPoE Client”</i> or <i>“Use IP Unnumbered”</i> in Method of Acquiring IP address (page 26), or if Easy Setup identified a PPPoE connection during setup.</p>

---

## IP Filter (Router Mode only)

The screen to edit IP filters which relates to the packets passing through the LAN side and the Internet side.

Parameter	Meaning
Log Output	If enabled, IP filter activity is saved to a log.
Operation	Specify how to process target packets.
Direction	Specify the transmission direction of target packets.
IP Address	Specify the sender's IP address and receiver's IP address of the target packets.
Protocol	Select a protocol for target transmission packet.
IP Filter Information	Display the list of IP filters which have been registered.



## VPN Pass Through (Router Mode only)

The screen to configure IPv6 pass through, PPPoE pass through, and PPTP pass through.



Parameter	Meaning
IPv6 Pass Through	Enable to use IPv6 Pass Through for address translation.
PPPoE Pass Through	Enable to use PPPoE bridge. Using PPPoE bridge lets you automatically obtain an IP address from your provider using the PPPoE protocol from your computer connected to the LAN side because all PPPoE packets can pass through between the Internet and LAN.
PPTP Pass Through	Enable to use the PPTP Pass Through for address translation.

# LAN Config (Router Mode only)

## Port Forwarding (Router Mode only)


The screen to configure the port translation.

Parameter	Meaning
Group	Specify a group name for a new rule to belong to. Select "New Group" and enter the new group name in the Group Name field to create a new group. A group name can include up to 16 alphanumeric letters.
Internet Side IP Address	Enter the Internet side IP address (before translation) for the port translation table entry.
Protocol	Select the Internet side protocol (before translation) for the port translation table entry.

Parameter	Meaning
LAN Side IP Address	Enter the LAN side IP address (after translation) for the port translation table entry.
LAN Side Port	Select the LAN side (after translation) port number (1 - 65535) for the port translation table entry.
Port Forwarding Registration Information	Shows current entries in the port translation table.

## DMZ (Router Mode only)

The screen to configure a destination to transfer communication packets without a LAN side destination.

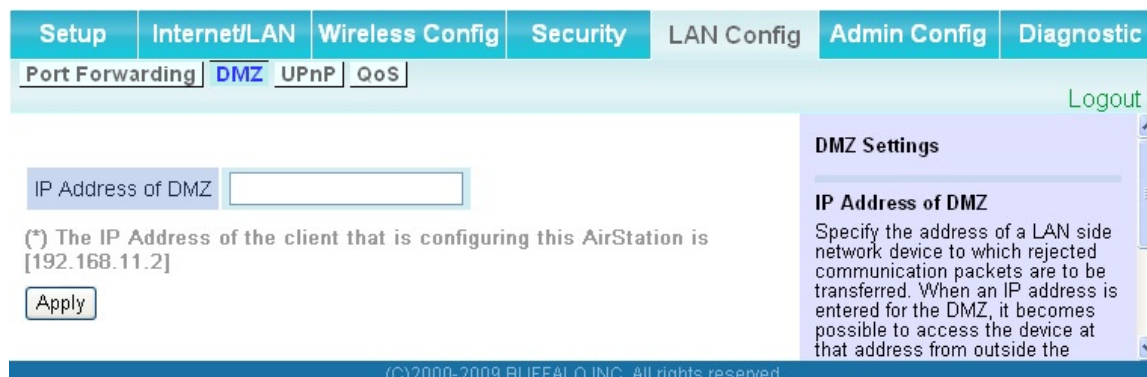

Parameter	Meaning
IP Address of DMZ	Enter the IP address of the destination to which packets which are not routed by a port translation table are forwarded. Note: RIP protocol packets (UDP port number 520) will not be forwarded.

## UPnP (Router Mode only)

The screen to configure UPnP (Universal Plug and Play).



---

Parameter	Meaning
UPnP	Enable or disable Universal Plug and Play (UPnP) functionality.

---

## QoS (Router Mode only)

The screen to configure the priority control of packets sent to the Internet.

QoS for transmission to the Internet  Enable

Upload bandwidth  Kbps

No.	Enable	application name	protocol	destination port	priority
1	<input type="checkbox"/>	VoIP	UDP		high
2	<input type="checkbox"/>	ssh	TCP	22	medium
3	<input type="checkbox"/>	telnet	TCP	23	medium
4	<input type="checkbox"/>	ftp	TCP	21	low
5	<input type="checkbox"/>		TCP		low
6	<input type="checkbox"/>		TCP		low
7	<input type="checkbox"/>		TCP		low
8	<input type="checkbox"/>		TCP		low

©2000-2009 BUFFALO INC. All rights reserved.

**QoS Setting**

QoS is a technology to use the bandwidth on the network more effectively. When two or more packets arrive at the same time, the packet with higher priority is processed first. This can be used to give priority to communications that require real time processing, such as VOIP.

**QoS for transmission to the Internet**

If checked, this gives priority to packets being transmitted to the internet. When enabled, you will be able to add four levels of increased priority for specific applications. By default, this is disabled.

**Uplink Bandwidth**

Specify the bandwidth transferred from this unit to the Internet in kbps. The real uplink bandwidth should be entered. If a bandwidth value larger than the real line speed is entered, the uplink bandwidth will be limited by

Parameter	Meaning
QoS for transmission to the Internet	Determine whether or not control the priority of packets to send to the Internet. Check this box to enable QoS.
Upload bandwidth	Specify the upstream bandwidth in kbps from the AirStation to the internet side. * Set the actual value for the upstream bandwidth.
Enable	Enable or disable this entry.
application name	Enter an application name. Names may use up to 32 alpha numerical characters, double or single tick marks ("), quotation marks ("), and semicolons (;).
protocol	Select either TCP or UDP.

Parameter	Meaning
destination port	Specify a destination port with the value of 1 - 65535. If this field is empty, a random port is selected.
priority	Select high, medium or low. * If packets do not qualify for classification as a type on the list, then their priority is treated as a level between medium and low.

## Admin Config

### Name

The screen to configure the AirStation's name.



Parameter	Meaning
AirStation Name	Enter a name for the AirStation. Names may include up to 64 alphanumeric characters and hyphens (-).
List Network Services	Enable or disable this item to display the computers and devices on your network with their supported services..

## Password


The screen to configure the password to login to the configuration screen of the AirStation.



Parameter	Meaning
Administrator Name	The user name to log in to the configuration screen of the AirStation. This name is fixed as "root".
Administrator Password	The password to log in to the configuration screen of the AirStation. The password may contain up to 8 alphanumeric characters and underscores (_).

## Time/Date

The screen to configure the internal clock in the AirStation.

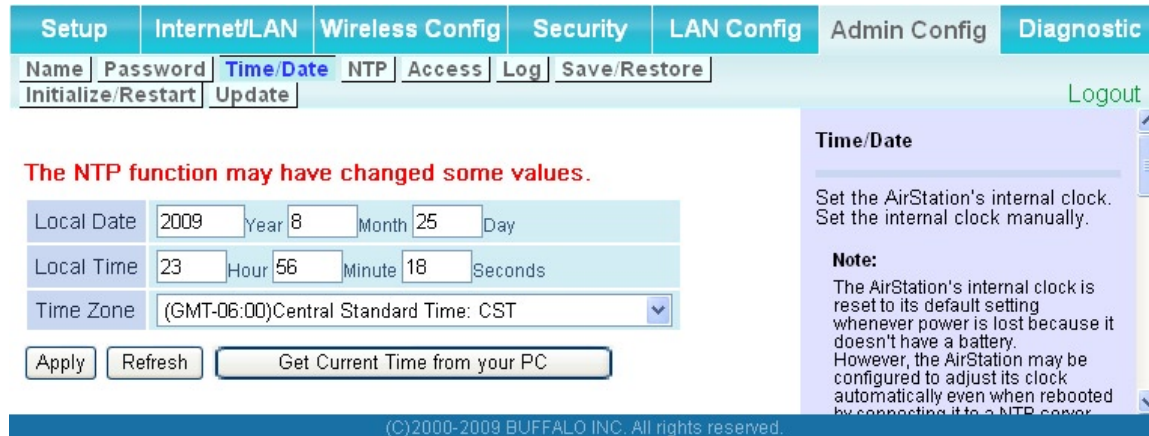

Parameter	Meaning
Local Date	You may manually set the date of the AirStation's internal clock.
Local Time	You may manually set the time of the AirStation's internal clock.
Time Zone	Specify the time zone (offset of Greenwich Mean Time) of the AirStation's internal clock.



## NTP


The screen to configure an NTP server to automatically synchronise the AirStation's internal clock.



Parameter	Meaning
NTP Functionality	Enable to use an NTP server to automatically set the AirStation's internal clock.
NTP Server	Enter the name of the NTP server as a host name, host name with domain name, or IP address. Up to 255 alphanumeric characters, hyphens (-), and underscores (_) may be used.
Update Interval	How often should the AirStation submit a time request to the NTP server? Intervals of 1 - 24 hours may be set.

## Access


The screen to restrict access to the AirStation's settings screens.

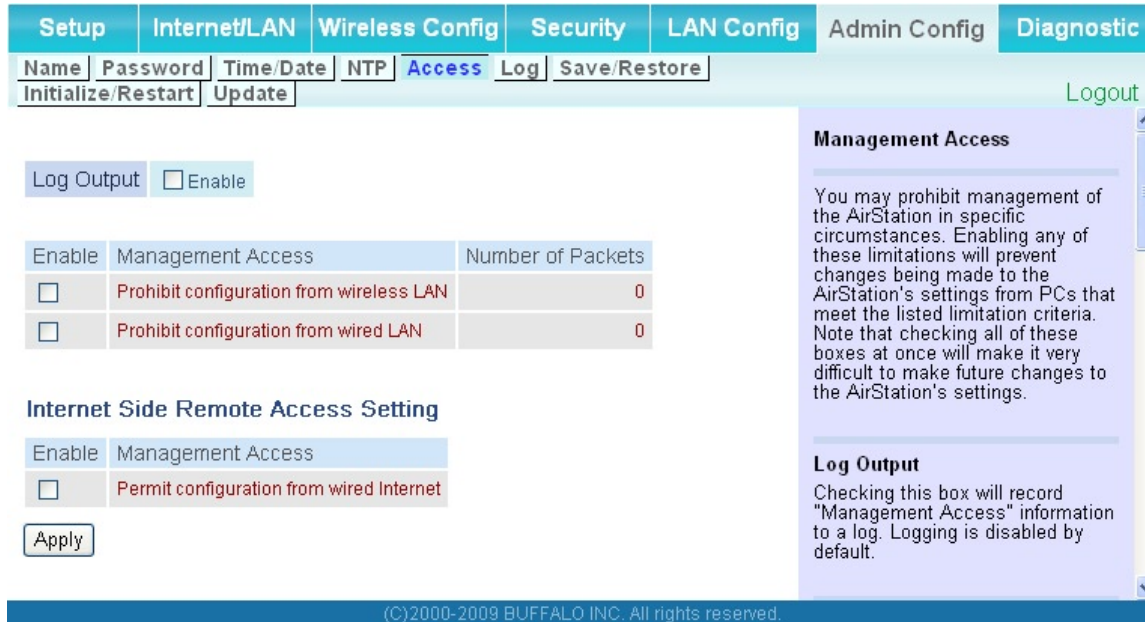

Parameter	Meaning
Log Output	Enabling outputs a log of changes to access settings.
Prohibit configuration from wireless LAN	If enabled, prevents access to settings screens from wirelessly connected devices (only wired devices may configure).
Prohibit configuration from wired LAN	If enabled, prevents access to settings screens from wired devices (only wirelessly connected devices may configure).
Permit configuration from wired Internet	If enabled, allows access to settings screens from network devices on the Internet side.
Permitted IP address	Displayed only if Internet side configuration is enabled. Enter the IP address of the device that is permitted to configure the AirStation remotely from the Internet side.
Permitted Port	Displayed only if Internet side configuration is enabled. Set a port number (1 - 65535) if configuring the AirStation from the Internet side.

# Log


The screen to transfer the log information of the AirStation by the syslog.

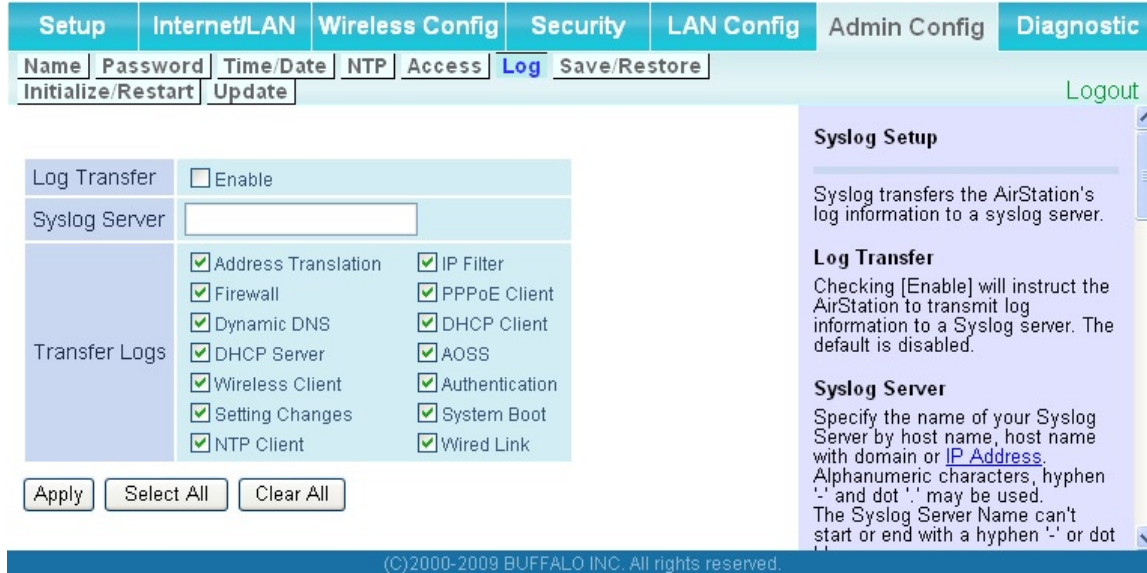

Parameter	Meaning
Log Transfer	Enable to send logs to a syslog server.
Syslog Server	Identify the syslog server by host name, host name with domain name, or IP address. You may enter up to 255 alphanumeric characters, hyphens (-), and underscores (_).
Transfer Logs	Choose which logs will be transferred to the syslog server.

## Save/Restore


The screen to save to or restore from an AirStation configuration file.

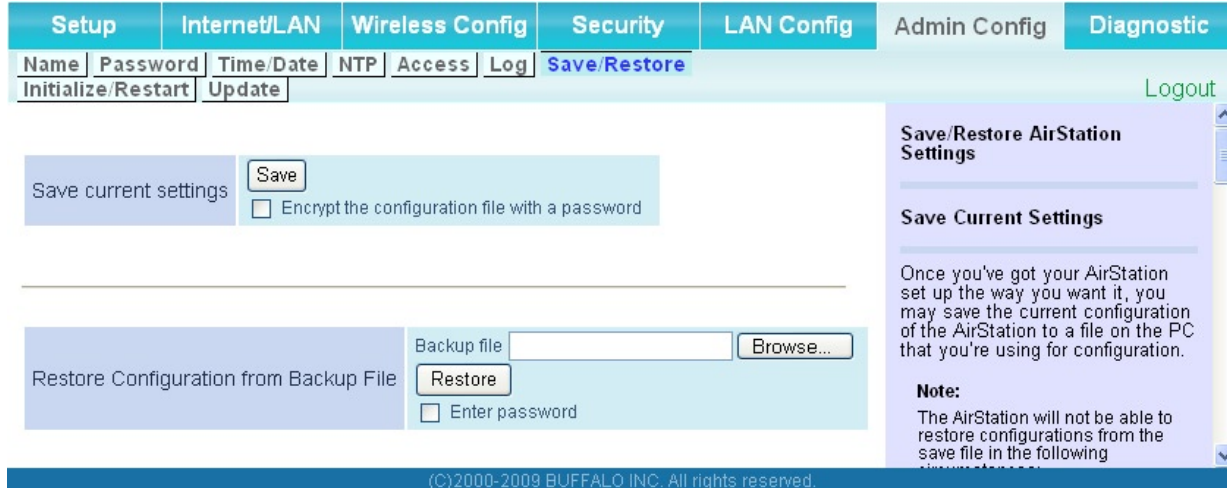

Parameter	Meaning
Save current settings	Clicking "Save" will save the current configuration of the AirStation to a file. If the "Encrypt the configuration file with a password" option is checked, then the configuration file will be password protected with the current Administrator Password (page 62).
Restore Configuration from Backup File	Restore the configuration of the AirStation from a saved configuration file by clicking the "Browse" button, navigating to the configuration file, and then clicking Restore. If the configuration file was password protected, then put a check next to "To restore from the file you need the password", enter the password, and click "Open".

## Initialize/Restart


The screen to initialize and restore the AirStation.

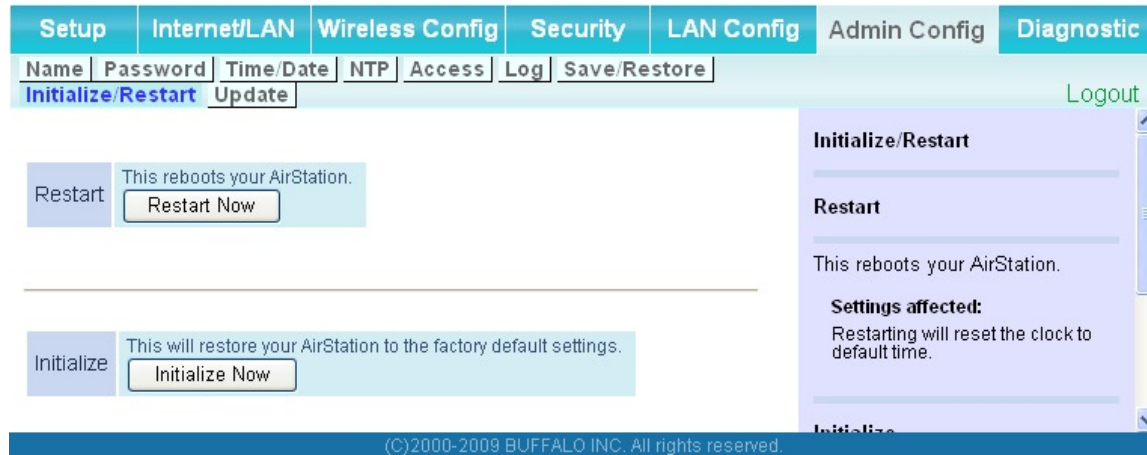

Parameter	Meaning
Restart	Click " <i>Restart Now</i> " to restart the AirStation.
Initialize	Click " <i>Initialize Now</i> " to initialize and restart the AirStation.

## Update

The screen to update the AirStation's firmware.

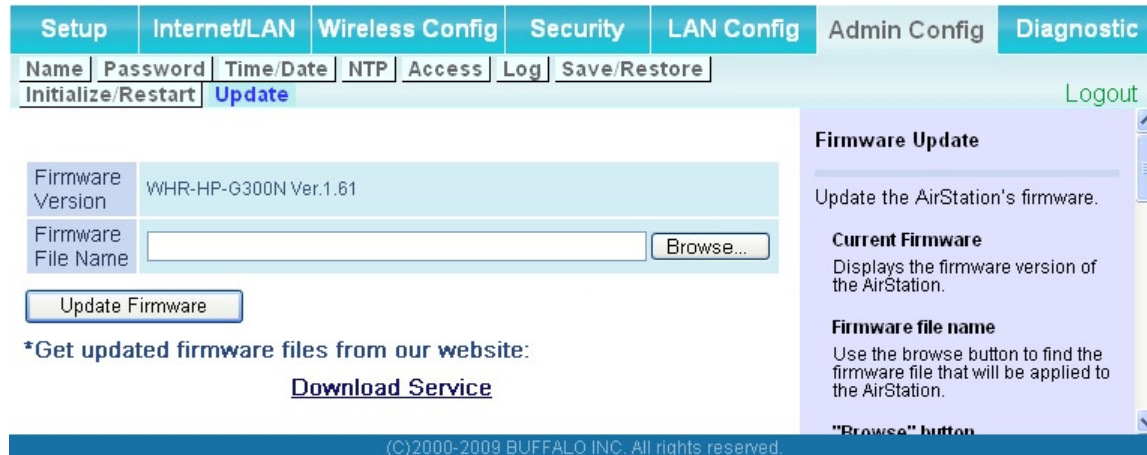

Parameter	Meaning
Firmware Version	Displays the current firmware version of the AirStation.
Firmware File Name	Click "Browse" to specify a firmware file and click "Update Firmware." This will update the firmware.

# Diagnostic

## System Info

The screen to verify the system information of the AirStation.

Setup	Internet/LAN	Wireless Config	Security	LAN Config	Admin Config	Diagnostic																																																																																																																																																																			
<a href="#">System Info</a> <a href="#">Logs</a> <a href="#">Packet Info</a> <a href="#">Client Monitor</a> <a href="#">Ping</a>						Logout																																																																																																																																																																			
<table border="1"> <tr> <td>Model</td> <td colspan="5">WHR-HP-G300N Ver.1.61 (R3.01/B1.00)</td> </tr> <tr> <td>AirStation Name</td> <td colspan="5">AP0018E76A1E23</td> </tr> <tr> <td>Mode Switch Status</td> <td colspan="5">Automatic Mode</td> </tr> <tr> <td>Operational Mode</td> <td colspan="5">Router Mode ON</td> </tr> <tr> <td rowspan="10">Internet</td> <td>Method of Acquiring IP Address</td> <td colspan="4">Auto Detect Mode - PPPoE</td> </tr> <tr> <td colspan="5"><hr/></td> </tr> <tr> <td>Name of Connection</td> <td colspan="4">Easy Setup (Default Connection)</td> </tr> <tr> <td>Connection Status</td> <td colspan="4">Online</td> </tr> <tr> <td>Operation</td> <td colspan="4"><input type="button" value="Stop"/></td> </tr> <tr> <td>IP Address</td> <td colspan="4">222.4.67.69</td> </tr> <tr> <td>PPP Server IP</td> <td colspan="4">222.4.71.212</td> </tr> <tr> <td>DNS1(Primary)</td> <td colspan="4">210.196.3.183 (Auto)</td> </tr> <tr> <td>DNS2(Secondary)</td> <td colspan="4">210.141.112.163 (Auto)</td> </tr> <tr> <td>MTU Size</td> <td colspan="4">1454</td> </tr> <tr> <td colspan="5"><hr/></td> </tr> <tr> <td></td> <td>Wired Link</td> <td colspan="4">100Base-TX (Full-duplex)</td> </tr> <tr> <td></td> <td>MAC Address</td> <td colspan="4">00:18:E7:6A:1E:23</td> </tr> <tr> <td rowspan="4">LAN</td> <td>IP Address</td> <td colspan="4">192.168.11.1</td> </tr> <tr> <td>Subnet Mask</td> <td colspan="4">255.255.255.0</td> </tr> <tr> <td>DHCP Server</td> <td colspan="4">Enabled</td> </tr> <tr> <td>MAC Address</td> <td colspan="4">00:18:E7:6A:1E:23</td> </tr> <tr> <td rowspan="10">Wireless(802.11n/g/b)</td> <td>Wireless Status</td> <td colspan="4">Enabled</td> </tr> <tr> <td>SSID</td> <td colspan="4">0018E76A1E23</td> </tr> <tr> <td>Authentication</td> <td colspan="4">WPA/WPA2 mixedmode - PSK</td> </tr> <tr> <td>Encryption</td> <td colspan="4">TKIP/AES mixedmode</td> </tr> <tr> <td colspan="5"><hr/></td> </tr> <tr> <td>Broadcast SSID</td> <td colspan="4">Enable</td> </tr> <tr> <td>Privacy Separator</td> <td colspan="4">Disable</td> </tr> <tr> <td>Wireless Channel</td> <td colspan="4">11 (Auto)</td> </tr> <tr> <td>300Mbps Mode</td> <td colspan="4">20 MHz</td> </tr> <tr> <td>MAC Address</td> <td colspan="4">00:18:E7:6A:1E:23</td> </tr> </table>						Model	WHR-HP-G300N Ver.1.61 (R3.01/B1.00)					AirStation Name	AP0018E76A1E23					Mode Switch Status	Automatic Mode					Operational Mode	Router Mode ON					Internet	Method of Acquiring IP Address	Auto Detect Mode - PPPoE				<hr/>					Name of Connection	Easy Setup (Default Connection)				Connection Status	Online				Operation	<input type="button" value="Stop"/>				IP Address	222.4.67.69				PPP Server IP	222.4.71.212				DNS1(Primary)	210.196.3.183 (Auto)				DNS2(Secondary)	210.141.112.163 (Auto)				MTU Size	1454				<hr/>						Wired Link	100Base-TX (Full-duplex)					MAC Address	00:18:E7:6A:1E:23				LAN	IP Address	192.168.11.1				Subnet Mask	255.255.255.0				DHCP Server	Enabled				MAC Address	00:18:E7:6A:1E:23				Wireless(802.11n/g/b)	Wireless Status	Enabled				SSID	0018E76A1E23				Authentication	WPA/WPA2 mixedmode - PSK				Encryption	TKIP/AES mixedmode				<hr/>					Broadcast SSID	Enable				Privacy Separator	Disable				Wireless Channel	11 (Auto)				300Mbps Mode	20 MHz				MAC Address	00:18:E7:6A:1E:23			
Model	WHR-HP-G300N Ver.1.61 (R3.01/B1.00)																																																																																																																																																																								
AirStation Name	AP0018E76A1E23																																																																																																																																																																								
Mode Switch Status	Automatic Mode																																																																																																																																																																								
Operational Mode	Router Mode ON																																																																																																																																																																								
Internet	Method of Acquiring IP Address	Auto Detect Mode - PPPoE																																																																																																																																																																							
	<hr/>																																																																																																																																																																								
	Name of Connection	Easy Setup (Default Connection)																																																																																																																																																																							
	Connection Status	Online																																																																																																																																																																							
	Operation	<input type="button" value="Stop"/>																																																																																																																																																																							
	IP Address	222.4.67.69																																																																																																																																																																							
	PPP Server IP	222.4.71.212																																																																																																																																																																							
	DNS1(Primary)	210.196.3.183 (Auto)																																																																																																																																																																							
	DNS2(Secondary)	210.141.112.163 (Auto)																																																																																																																																																																							
	MTU Size	1454																																																																																																																																																																							
<hr/>																																																																																																																																																																									
	Wired Link	100Base-TX (Full-duplex)																																																																																																																																																																							
	MAC Address	00:18:E7:6A:1E:23																																																																																																																																																																							
LAN	IP Address	192.168.11.1																																																																																																																																																																							
	Subnet Mask	255.255.255.0																																																																																																																																																																							
	DHCP Server	Enabled																																																																																																																																																																							
	MAC Address	00:18:E7:6A:1E:23																																																																																																																																																																							
Wireless(802.11n/g/b)	Wireless Status	Enabled																																																																																																																																																																							
	SSID	0018E76A1E23																																																																																																																																																																							
	Authentication	WPA/WPA2 mixedmode - PSK																																																																																																																																																																							
	Encryption	TKIP/AES mixedmode																																																																																																																																																																							
	<hr/>																																																																																																																																																																								
	Broadcast SSID	Enable																																																																																																																																																																							
	Privacy Separator	Disable																																																																																																																																																																							
	Wireless Channel	11 (Auto)																																																																																																																																																																							
	300Mbps Mode	20 MHz																																																																																																																																																																							
	MAC Address	00:18:E7:6A:1E:23																																																																																																																																																																							

 **System Information**  Display the AirStation's main settings.  **Model** Displays the model name and firmware version of the AirStation.  **AirStation Name** Displays the AirStation's host name.  **Status of the hardware mode switch** Displays the status of the ROUTER switch.  **Operational Mode** Displays the current mode of operation.  **Internet** AirStation's [Internet port](#) side information.  **Method of Acquiring IP Address** Acquiring a Internet IP address.  **Name of the Connection** The name of the PPPoE connection specified in the configuration.  **Connection Status** Displays the current Internet side status.  **Operational Mode** The Operational Mode will show if any DHCP or PPPoE configuration is active. If DHCP is in use, the following commands can be executed.   - [Release] : Releases the IP address assigned by the DHCP Server. - [Renew] : Renews the IP address from the DHCP Server.   The following commands can be executed by using PPPoE ||  | | | | | |  |
| (C)2000-2009 BUFFALO INC. All rights reserved. | | | | | | |

---


<b>Parameter</b>	<b>Meaning</b>
Model	Displays the product name of the AirStation and the firmware version.
AirStation Name	Displays AirStation Name (refer to page 61).
Mode Switch Status	Displays the status of the mode switch on the back of the AirStation.
Operational Mode	Displays the current operational mode of the AirStation.
Internet	Displays the information about the Internet port.
LAN	Displays the information about the LAN port.
Wireless	Displays the wireless status.

---



## Logs

The screen to check log information recorded by the AirStation.

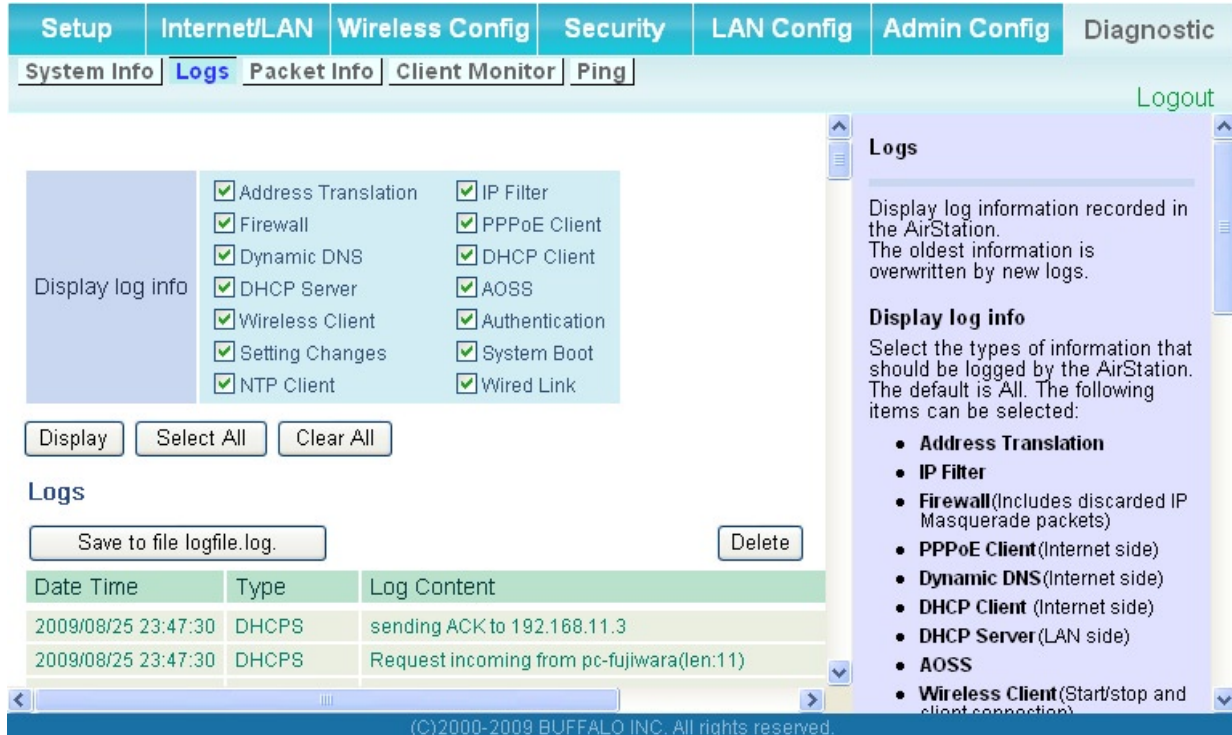

Parameter	Meaning
Display log info	Choose the types of log information to display.
Logs	Displays the log information recorded in the AirStation.

## Packet Info

The screen to verify the total amount of packets the AirStation transfers.

The screenshot shows the 'Packet Info' page with a navigation menu at the top. The 'Packet Info' tab is selected. Below the navigation menu is a table showing traffic for various interfaces. To the right of the table is a 'Packet Traffic Information' section with a 'Refresh' button and a 'Logout' link.

Interface	Sent		Received	
	Normal	Errors	Normal	Errors
Wired Internet	3268	0	5529	0
Wired LAN	10423	0	6741	0
PPPoE No.1: Easy Setup	3071	0	5370	0
Wireless LAN (802.11n/g/b)	392	0	181	0

**Packet Traffic Information**  
The total numbers of packets sent and received by the AirStation, as well as the errors sending and receiving, are displayed.

**[Refresh] button**  
Displayed packet information is renewed with current information when this button is clicked.

Logout

(C)2000-2009 BUFFALO INC. All rights reserved.

Parameter	Meaning
Sent	Displays the number of packets sent to the Internet side of Ethernet, the LAN side of the Ethernet, and the LAN side of the wireless connection.
Received	Displays the number of packet received from the Internet side of Ethernet, the LAN side of the Ethernet, and the LAN side of the wireless connection.

## Client Monitor

This screen shows devices that are connected to the AirStation.




MAC Address	Lease IP Address	Hostname	Communication Method	Wireless Authentication	802.11n
00:11:09:5C:86:F1	-	-	Wired	-	-
00:1D:73:92:0B:7F	192.168.11.3	pc-fujiwara	Wireless	Authorized	Enable

Parameter	Meaning
Client Monitor	Displays information ( MAC address, lease IP address, host name, communication method, wireless authentication and 802.11n) for devices that are connected to the AirStation.

## Ping

A Ping test checks whether the AirStation can communicate with a specific network device.

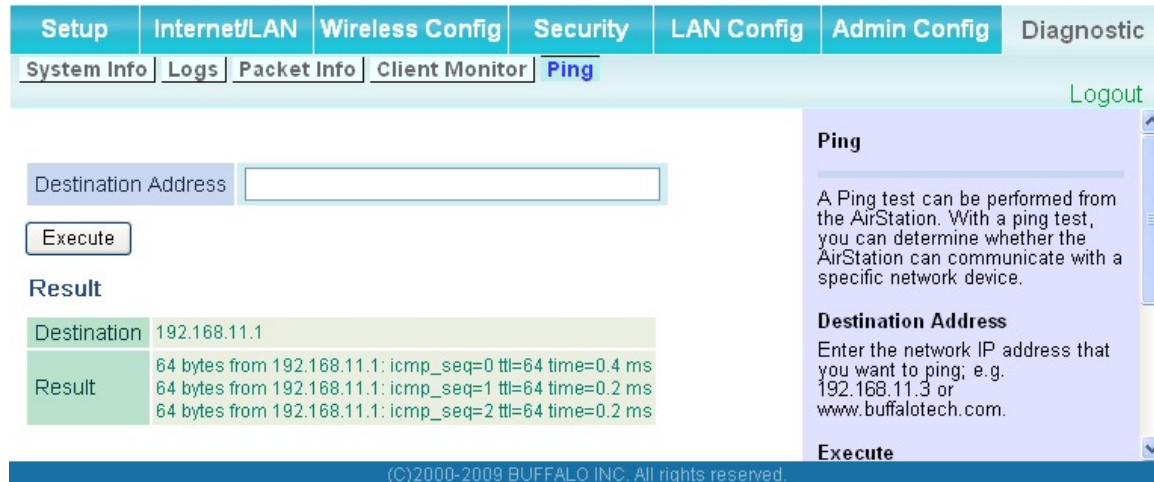

Parameter	Meaning
Destination Address	Enter an IP address or a host name of the device for which you try to verify the connection, and click "Execute". The result will be displayed in the "Result" field.

# Chapter 5

## Connect to a Wireless Network


### Automatic Secure Setup (AOSS/WPS)

---

AOSS and WPS are systems which enables you to automatically configure wireless LAN settings. Just pressing the buttons will connect wireless devices and complete security settings. Utilize this system to connect to wireless devices, computers, or game machines which support AOSS or WPS.



AOSS (AirStation One-Touch Secure System) is technology developed by BUFFALO. WPS was created by the Wi-Fi Alliance.

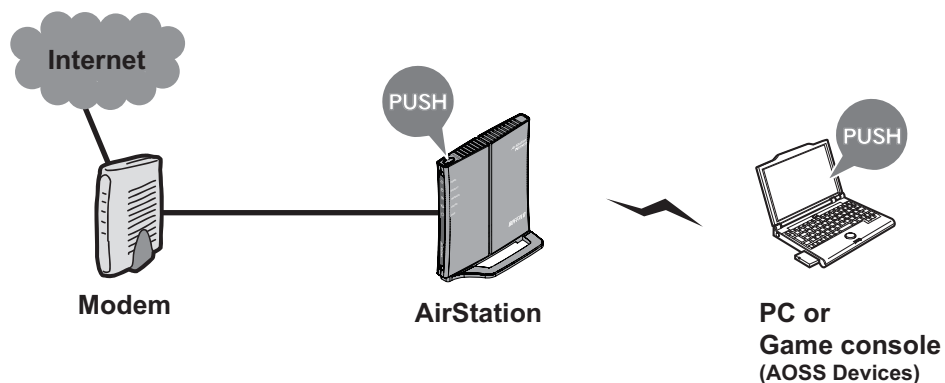


- Before using AOSS/WPS to connect to a Buffalo wireless client, install Client Manager software from the included AirNavigator CD. Consult your wireless client's documentation for more information.
- Buffalo's Client Manager software can be used with the wireless LAN devices built into your computer. However, it is not guaranteed to work with all wireless LAN devices available.

## Windows Vista (Client Manager V)


If you are using Windows Vista, use the included Client Manager V software to connect wirelessly with AOSS/WPS.

1 Click the icon  in the system tray.

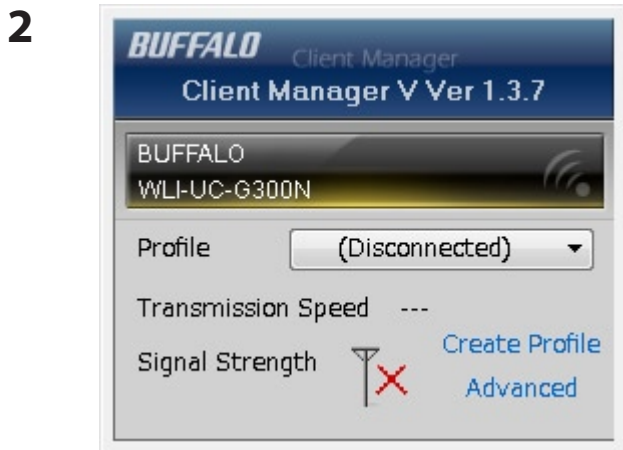

When the screen at left is displayed, click "Create Profile".

3 When the message "A Program needs your permission to continue" appears, click "Continue".

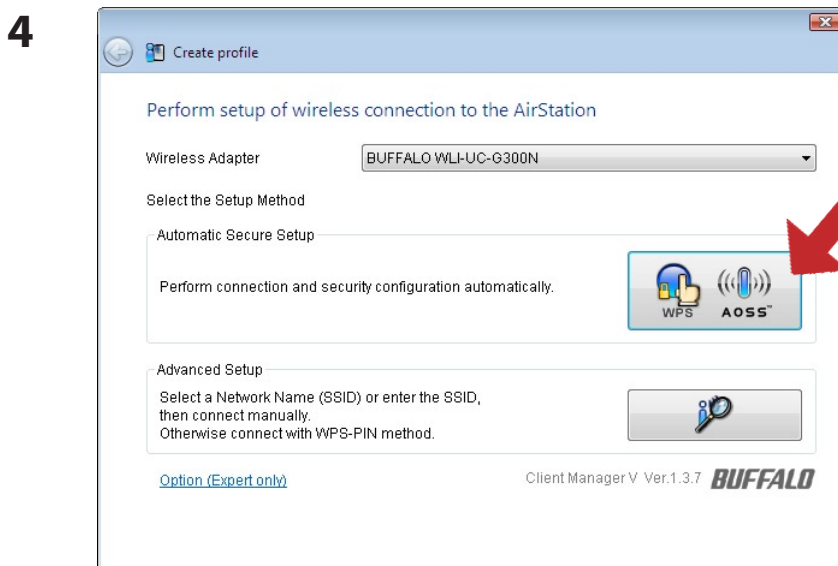


When the screen shown at left is displayed, click the "WPS AOSS" button.

Follow the instructions displayed on the screen. After you configure the settings and the Security LED (page 8) stops flashing and is lit, the AOSS/WPS connection is completed.

## Windows XP (Client Manager 3)

If you are using Windows XP, use the included Client Manager 3 software to connect wirelessly with AOSS/WPS.

1 Right click on the icon  displayed in the system tray, and select "Profile".

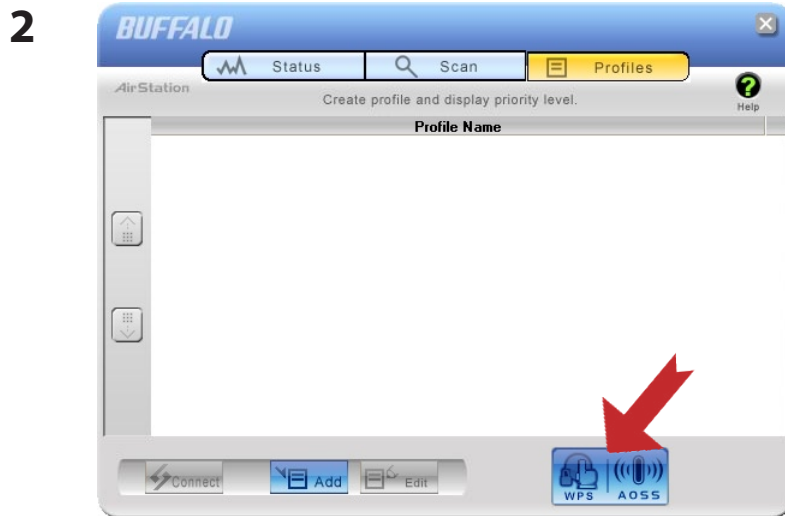

When the screen shown at left is displayed, click "WPS AOSS" button.

Follow the instructions displayed on the screen. After you configure the settings and the SECURITY LED (on page 8) stops flashing and is lit, the AOSS/WPS connection is completed.

## Other Devices (e.g. Game Console)

If you are using a game machine which supports AOSS or WPS, refer to that device's manual to initiate AOSS/WPS. When instructed, hold down the AOSS button (page 11) on the AirStation for 1 second.

After you configure the settings and the SECURITY LED (on page 8) stops blinking and is lit, the AOSS/WPS connection is completed.

## Manual Setup

---

You can also connect to the AirStation without installing Client Manager V or Client Manager 3 by using Windows standard utility.


The procedure varies depending on which version of Windows you are using.

### Windows 7 (WLAN AutoConfig)

Use Windows standard utility (WLAN AutoConfig) to connect to the AirStation.

**1** Click on the network icon  in the system tray.

**2**



Select the target AirStation's name and click "Connect". For future use, checking "Connect automatically" is recommended.

The screenshot shows the Windows 7 WLAN AutoConfig utility window. It displays the current network connection as 'Network' with 'Internet access'. Under 'Wireless Network Connection', there are two visible networks: 'manual\_G' and 'WAP-G'. The 'manual\_G' network is selected and has a 'Connect' button next to it. A tooltip is visible over the 'manual\_G' network, showing details: Name: 0018E76A1E6E, Signal Strength: Fair, Security Type: WPA2-PSK, and Radio Type: 802.11n. The 'Connect automatically' checkbox is checked for the selected network.



3



Enter the encryption key (such as WEP key or pre-shared key) and click "OK".

## Windows Vista (WLAN AutoConfig)

Use Windows standard utility (WLAN AutoConfig) to connect to the following AirStation.


1

Right click on the wireless network icon  in the system tray.

2



Click "Connect to a network".

3

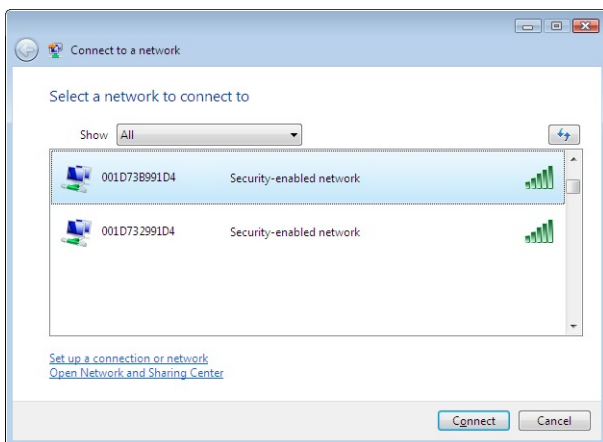

When the screen at left is displayed, select the network to connect to and click "Connect".

If the screen below is displayed, click *"I want to enter the network key or passphrase instead"*.  
(If this screen is not displayed, go to step 4)

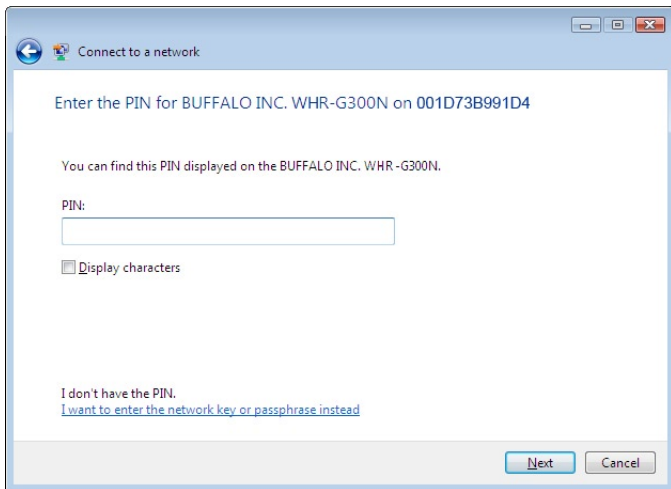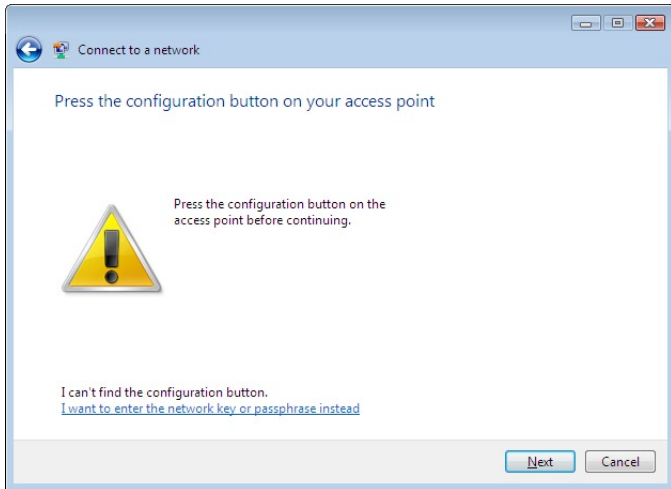

4




When the screen at left is displayed, enter an encryption key (such as WEP key or pre-shared key) and click “Connect”.

Follow the instructions displayed on the screen to finish configuration.  
(If the Set Network Location screen is displayed, select “Home”, “Work”, or “Public location” depending where you’re using the AirStation.)


## Windows XP (Wireless Zero Configuration)


Windows XP includes a built-in utility to connect to your AirStation.

**Note:** If Client Manager 3 is installed on your computer, Wireless Zero Configuration is disabled. Uninstall Client Manager 3 to use Wireless Zero Configuration, or just use Client Manager 3 to connect to the AirStation.

1 Right click on the wireless network icon  displayed in the system tray.

2 Click "View Available Wireless Networks".

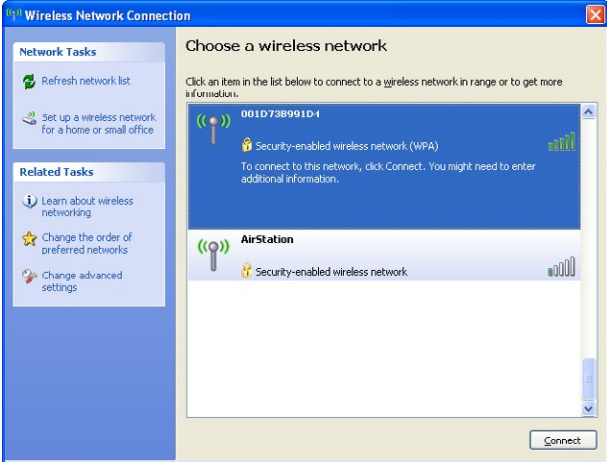3  When the screen at left is displayed, select the network to connect to and click "Connect".

4  When the screen at left is displayed, enter the encryption key (such as WEP key or pre-shared key) and click "Connect".

Follow the instructions displayed on the screen to finish configuration.

# Chapter 6

## Trouble Shooting

### **Cannot connect to the Internet over wired connection.**

- Make sure that your AirStation is plugged in!
- Check that the status LEDs of your AirStation are lit as below:

POWER	Green light is ON
WIRELESS	Green light is ON or flashing
ROUTER	Green light is ON or OFF (the status varies depending on your environment)
DIAG	OFF
LAN	Green light is ON or flashing
INTERNET	Green light is ON or flashing
- Make sure that your computer is set to "*obtain an IP address automatically*". (Refer to page 96)
- Restart your AirStation.

### **Cannot access the web-based configuration utility.**

- Display the configuration screen by following the procedure on page 18.
- Enter the correct user name and password to login to the configuration screen.  
If you are using AirStation in factory default settings, enter "root" (in lower case) for the user name and leave the password blank (enter nothing)
- Verify that your web browser is not set to use proxies.
- Make sure that your computer is configured to "*Obtain an IP Address Automatically*." (page 96)
- Restart your AirStation.

### **Cannot connect to the network wirelessly.**

- Configure your wireless device with the same SSID, encryption type, and encryption key as used for your AirStation.

The following are the factory default settings of the AirStation:

SSID - Printed on the label of the AirStation

Encryption Method - WPA/WPA2 mixedmode-PSK(\*)

\* Connect to the network using a wireless connection with WPA-PSK TKIP or WPA2-PSK AES. WPA2-PSK AES is most recommended.

Encryption Key - Printed on the label of the AirStation (if not, the AirStation is not encrypted in default configuration.)

- Place your AirStation and wireless devices 2 - 10 feet apart.
- Restart your AirStation.

## You forgot AirStation's SSID, Encryption Key, or Password.

---

Hold down the RESET button (page 99) on your AirStation for 5 seconds to initialize its settings. All settings, including your password, SSID, and encryption key will be initialized to their defaults.

The followings are the factory default settings of the AirStation.

SSID - Printed on the label of the AirStation

Encryption Method - WPA/WPA2 mixedmode-PSK(\*)

\* Connect to the network using a wireless connection with WPA-PSK TKIP or WPA2-PSK AES. WPA2-PSK AES is most recommended.

Encryption Key - Printed on the label of the AirStation (if not, the AirStation is not encrypted in default configuration.)

## The link speed is slower than 300/150 Mbps (Maximum link speed is only 130/65Mbps).

---

By default, the AirStation's 300/150 Mbps mode is not enabled. To enable it, use the following procedure:

1. Open the configuration screen of your AirStation (page 18).

2. Click "*Wireless SSID & Channel (11n 300(150)Mbps Mode)*" in Easy Setup.
3. Change the value in "*300(150) Mbps Mode*" - "*Band Width*" to 40 MHz and click "*Apply*".

If you still cannot connect at 300/150 Mbps, check the settings of your wireless client device.

## Other Tips

---

### **Issue:**

I reset my wireless router to factory settings and forgot how to log in.

### **Answer:**

Open your browser and enter 192.168.11.1 as the browser address and hit Enter. You will be prompted to log in. Enter the user name as root and the password box is left empty (no password). Click "OK" to complete the login and the option to reset your password will be available on the first page.

### **Issue:**

How do I forward ports on my wireless router for my gaming console?

### **Answer:**

Log in to the router. From the home page, go to the Internet Game/ Port Mapping section. Enter the port that needs to be forwarded, and the IP address of the gaming console.

### **Issue:**

How do I enable or modify security encryption settings on the wireless router?

### **Answer:**

Log in to the wireless router with your browser. Go to the Wireless Config tab and then select the Security tab. Buffalo recommends the use of WPA for wireless encryption. The passphrase/key should be at least 8 characters in length.

**Issue:**

How do I change my wireless router's broadcasted network name (SSID)?

**Answer:**

Log in to the wireless router with your browser. Go to the Wireless Config tab and then select the Basic tab if necessary. Find the settings area called SSID. Select the "Use" radio button and enter the name you wish to use for your network in the text field provided. Click "Apply" to save the settings. Once the wireless router has rebooted, you will need to manually select the new network name for all wireless devices and enter your encryption key if necessary.

**Issue:**

What can I do if my wireless connection drops randomly or seems slow?

**Answer:**

There are many environmental factors that may affect this behavior. First, ensure the issue is not range related by locating the wireless router and the device dropping connection in closer proximity and check whether the connection drops continue.

In some cases, interference from other wireless networks or sources such as 2.4 GHz wireless phones may impact performance. To work around this scenario, change the wireless channel used by your wireless router.

Log in to the wireless router with your browser. Click on the Wireless Config tab and then the Basic tab. The Wireless Channel setting can be selected from channels 1 to 11. If an Auto-Channel option is available, attempt to use this option to remedy the problem. If Auto-Channel is unavailable, manually select an alternate channel and click "Apply".

**Issue:**

Though I am able to successfully make a connection with my wireless router, I am unable to access the Internet with my web browser.

**Answer:**

First, power off the Cable or DSL modem, the wireless router, and your computer. Move the router's



mode switch to the *on* position. Verify that the modem is connected to the wireless router with an Ethernet cable to the WAN port. Power on the modem and wait one minute. Power on the wireless router and wait another minute. Power on the computer. Open a browser on the computer and navigate to a familiar website to verify whether the Internet connection is functioning normally. If after these steps, an Internet connection is still unavailable, power off the Cable or DSL modem and computer again and directly connect your computer to the Cable or DSL modem with a cable between the computer and the port on the modem. Power on the modem and wait one minute. Power on the computer and again check for an Internet connection.

If an Internet connection IS NOT available with a direct connection to the computer, please call the Internet Service Provider who installed the modem.

If an Internet connection IS available with a direct connection to the computer, please call our customer support.

**Issue:**

Where can I download the latest drivers, firmware and instructions for my Buffalo wireless products?

**Answer:**

The latest drivers and firmware are available online at ***[www.buffalotech.com](http://www.buffalotech.com)***

# Appendix A

## Specifications

### WHR-HP-G300N

<b>Wireless LAN Interface</b>	
Standard Compliance	IEEE802.11b / IEEE802.11g / IEEE802.11n
Transmission Method	Direct Sequence Spread Spectrum (DSSS), OFDM, MIMO
Frequency Range	2,412 - 2,462MHz (Channels 1 - 11)
Transmission Rate	802.11b/g: 54, 48, 36, 24, 18, 12, 9, 6, 11, 5.5, 2, 1Mbps 802.11n 20MHz Channel (LongGI) 130/117/104/78/52/39/26/13Mbps (mcs15-8) (2stream) 65/58.5/52/39/26/19.5/13/6.5Mbps (mcs7-0) (1stream) 40MHz Channel (LongGI) 270.0/243.0/216.0/162.0/108.0/81.0/54.0/27.0Mbps (mcs15-8) (2stream) 135/121.5/108.0/81.0/54.0/40.5/27.0/13.5Mbps(mcs7-0) (1stream) (ShortGI) 300.0Mbps (mcs15) (2stream) 150.0Mbps (mcs7) (1stream)
Access Mode	Infrastructure Mode
Security	AOSS, WPA2-PSK (TKIP/AES), WPA/WPA2 mixed PSK, WPA-PSK (TKIP/AES), 128/64bit WEP, Mac Address Filter
<b>Wired LAN Interface</b>	
Standard Compliance	IEEE802.3u (100BASE-TX), IEEE802.3 (10BASE-T)
Transmission Rate	10 / 100Mbps
Transmission Encoding	100BASE-TX 4B5B/MLT-3, 10BASE-T Manchester Coding
Access Method	CSMA/CD
Speed and Flow Control	10/100, Auto Sensing, Auto MDIX
Number of LAN Ports	4
LAN Port Connector	RJ-45
<b>Other</b>	
Power Supply	External AC 100-240V Universal, 50/60Hz
Power Consumption	Approx. 5.7W (Max)
Dimensions	142mm x 124mm x 25mm (5.6 x 4.9 x 1.0 in.)
Weight	230g (7.4 oz.) *stand not included
Operating Environment	0-40°C (32-104°F) , 20-80% (non-condensing)

## WHR-HP-GN

<b>Wireless LAN Interface</b>	
Standard Compliance	IEEE802.11b / IEEE802.11g / IEEE802.11n specification
Transmission Method	Direct Sequence Spread Spectrum (DSSS), OFDM, SISO
Frequency Range	2,412 - 2,462MHz (Channels 1 - 11)
Transmission Rate	802.11b/g 54, 48, 36, 24, 18, 12, 9, 6, 11, 5.5, 2, 1Mbps 802.11n 20MHz Channel (LongGI) 65/58.5/52/39/26/19.5/13/6.5Mbps (mcs7-0) (1stream) 40MHz Channel (LongGI) 135.0/121.5/108.0/81.0/54.0/40.5/27.0/13.5Mbps (mcs7-0) (1stream) (ShortGI) 150.0Mbps (mcs7) (1stream)
Access Mode	Infrastructure Mode
Security	AOSS, WPA2-PSK (TKIP/AES), WPA/WPA2 mixed PSK, WPA-PSK (TKIP/AES), 128/64bit WEP, Mac Address Filter
<b>Wired LAN Interface</b>	
Standard Compliance	IEEE802.3u (100BASE-TX), IEEE802.3 (10BASE-T)
Transmission Rate	10 / 100Mbps
Transmission Encoding	100BASE-TX 4B5B/MLT-3, 10BASE-T Manchester Coding
Access Method	CSMA/CD
Speed and Flow Control	10/100, Auto Sensing, Auto MDIX
Number of LAN Ports	4
LAN Port Connector	RJ-45
<b>Other</b>	
Power Supply	External AC 100-240V Universal, 50/60Hz
Power Consumption	Approx. 5.5W (Max)
Dimensions	142mm x 124mm x 25mm (5.6 x 4.9 x 1.0 in.)
Weight	210g (6.8 oz.) *stand not included
Operating Environment	0-40°C (32-104°F) , 20-80% (non-condensing)

# Appendix B

## Default Configuration Settings

Feature	Parameter	Default Setting
Internet (Router Mode only)	Method of Acquiring IP Address	Perform Easy Setup (Internet Connection Wizard)
	Default Gateway	none
	Address of DNS Name Server	none
	Internet MAC Address	Use Default MAC Address
	MTU Size of Internet Port	1500 Bytes
PPPoE (Router Mode only)	Default PPPoE Connection	No Active Session
	IP Unnumbered PPPoE Connection	No Active Session
	PPPoE Connection List	none
	Preferred Connections	none
DDNS (Router Mode only)	Dynamic DNS Service	Disable
	Current Dynamic DNS Information	none
VPN Server (Router Mode only)	LAN Side IP Address	192.168.11.1(255.255.255.0)
	DHCP Server Function	Enable
	DHCP IP Address Pool	192.168.11.2 for up to 64 Address(es)
	PPTP Server Function	Disable
	Authorization Type	MS-CHAPv2 (40/128-bit Encryption)
	Server IP Address	Auto
	Client IP Address	Auto
	DNS Server IP Address	LAN IP address of the AirStation
	WINS Server IP Address	None
	PPTP User List	None
LAN	LAN Side IP Address	Router Mode: 192.168.11.1 (255.255.255.0) Bridge Mode (Router Switch OFF): 192.168.11.100 (255.255.255.0) Bridge Mode (Router Switch AUTO): Obtain automatically from DHCP Server

Feature	Parameter	Default Setting
	DHCP Server Function (Router Mode only)	Enable
	DHCP IP Address Pool (Router Mode only)	192.168.11.2 for up to 64 Addresses
	LAN Side IP Address (IP Unnumbered) (Router Mode only)	none
	Lease Period (Router Mode only)	48Hours
	Default Gateway (Router Mode only)	AirStation's IP Address
	DNS Servers (Router Mode only)	AirStation's IP Address
	WINZ Server (Router Mode only)	Do Not Specify
	Domain Name (Router Mode only)	Assigned Domain Name
	Default Gateway (Bridge Mode only)	none
	DNS Server Address (Bridge Mode only)	none
DHCP Lease (Router Mode only)	Current DHCP Client Information	none
NAT (Router Mode only)	Address Translation	Enable
	Log Output of Deleted Packets	Disable
Route	Routing Information	none
WPS	WPS	Enable
	External Registrar	Enable
	AirStation PIN	An 8-digit random value (Printed on the label of the AirStation)
	WPS Security Information	WPS status: configured SSID: AirStation's MAC Address Security: WPA-PSK AES, or no authentication Encryption key: A 13-digit random value or disabled.

Feature	Parameter	Default Setting		
AOSS	Encryption level expansion function	Enable		
	Dedicated WEP SSID isolation	Disable		
	AOSS Button on the AirStation Unit	Enable		
Basic	Wireless Radio	Enable		
	Wireless Channel	Auto Channel		
	300(150)Mbps Mode	Band Width: 20MHz Extension Channel: -		
	Broadcast SSID	Allow		
	Separate feature	not used		
	SSID	Configure AirStation's MAC address		
	Wireless authentication	WPA/WPA2 mixedmode-PSK, or no authentication		
	Wireless encryption	TKIP/AES mixedmode, or no encryption		
	WPA-PSK (Pre-Shared Key)	A 13-digit random value (Printed on the label of the AirStation)		
	Rekey interval	60 minutes		
Advanced	Multicast Rate	Auto		
	DTIM Period	1		
	Privacy Separator	Disable		
WMM	WMM-EDCA Parameters (Priority AC_BK (Low) )		For AP	For STA
		CWmin	15	15
		CWmax	1023	1023
		AIFSN	7	7
		TXOP Limit	0	0
		Admission Control	-----	Disable
	WMM-EDCA Parameters (Priority AC_BE (Normal) )		For AP	For STA
		CWmin	15	15
		CWmax	63	1023
		AIFSN	3	3
		TXOP Limit	0	0
		Admission Control	-----	Disable

Feature	Parameter	Default Setting		
	WMM-EDCA Parameters (Priority AC_VI (High) )		For AP	For STA
		CWmin	7	7
		CWmax	15	15
		AIFSN	1	2
		TXOP Limit	94	94
		Admission Control	-----	Disable
	WMM-EDCA Parameters (Priority AC_VO (Highest) )		For AP	For STA
		CWmin	3	3
		CWmax	7	7
		AIFSN	1	2
		TXOP Limit	47	47
		Admission Control	-----	Disable
MAC Filter	Enforce MAC Filter	Disable		
	Registration List	none		
Multicast Control	Snooping	Enable		
	Multicast Aging Time	300 Sec.		
WDS	WDS	Use		
	Specify Master/Slave	Master		
Firewall (Router Mode only)	Log Output	Disable		
	Basic Rules	Prohibit NBT and Microsoft-DS Routing Reject IDENT Requests Block Ping from Internet	Disable Enable Enable	
IP Filter (Router Mode only)	Log Output	Disable		
	IP Filter Information	none		
VPN Pass Through (Router Mode only)	IPv6 Pass Through	Enable		
	PPPoE Pass Through	Disable		
	PPTP Pass Through	Disable		
Port Forwarding (Router Mode only)	Port Forwarding Registration Information	none		
DMZ (Router Mode only)	IP Address of DMZ	none		
UPnP (Router Mode only)	UPnP	Enable		

Feature	Parameter	Default Setting	
QoS (Router Mode only)	QoS for transmission to the Internet	Disable	
Name	AirStation Name	AP + AirStation's MAC Address	
	List Network Services	Enable	
Password	Administrator Name	root (fixed)	
	Administrator Password	none	
Time/Date	Local Date	2009 Year 1 Month 1 Day	
	Local Time	0 Hour 0 Minute 0 Seconds	
	Time Zone	(GMT-06:00) Central Standard Time: CST	
NTP	NTP Functionality	Enable	
	NTP Server	time.nist.gov	
	Update Interval	24 hours	
Access	Log Output	Disable	
	Limitation Item	Prohibit configuration from wireless LAN	Disable
		Prohibit configuration from wired LAN	Enable
Permit configuration from wired Internet		Enable	
Log	Log Transfer	Disable	
	Syslog Server	none	
	Transfer Logs	Router Mode: Address Translation, IP Filter, Firewall, PPPoE Client, Dynamic DNS, DHCP Client, DHCP Server, AOSS, Wireless Client, Authentication, Setting Changes, System Boot, NTP Client, and Wired Link  Bridge Mode: IP Filter, DHCP Client, AOSS, Wireless Client, Authentication, Setting Changes, System Boot, NTP Client, and Wired Link	



# Appendix C

## TCP/IP Settings in Windows

### Windows 7

---

To perform the settings for Windows 7, follow the procedure below.

- 1** Click *Start > Control Panel > Network and Internet*.
- 2** Double click *"Network and Sharing Center"*.
- 3** Click *"Change Adapter Settings"* on the left side menu.
- 4** Right click on *"Local Area Connection"*, then click *"Properties"*.
- 5** If the message *"Windows needs your permission to continue"* appears, click *"Continue"*.
- 6** Select *"Internet Protocol Version 4 (TCP/IPv4)"* then click *"Properties"*.
- 7** Select *"Obtain an IP address automatically"* and *"Obtain DNS server address automatically"*, then click *"OK"*.
- 8** Click *"OK"*.

## Windows Vista

---

To perform the settings for Windows Vista, follow the procedure below.

- 1** Click *Start > Settings > Control Panel*.
- 2** Double click *"Network and Sharing Center"*.
- 3** Click *"Manage network connections"* on the left side menu.
- 4** Right click on *"Local Area Connection"*, then click *"Properties"*.
- 5** When the message *"Windows needs your permission to continue"* appears, click *"Continue"*.
- 6** Select *"Internet Protocol Version 4 (TCP/IPv4)"* then click *"Properties"*.
- 7** Select *"Obtain an IP address automatically"* and *"Obtain DNS server address automatically"*, then click *"OK"*.
- 8** Click *"Close"*.

## Windows XP


---

To perform the settings for Windows XP, follow the procedure below.

- 1** Click *Start > Settings > Control Panel*.
- 2** Double click *"Network"*.
- 3** Right click on *"Local Area Connection"*, then click *"Properties"*.
- 4** Select *"Internet Protocol (TCP/IP)"*, then click *"Properties"*.
- 5** Select *"Obtain an IP address automatically"* and *"Obtain DNS server address automatically"*, and then click *"OK"*.
- 6** Click *"Close"*.

# Appendix D

## Restoring the Default Configuration

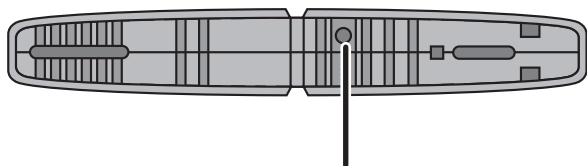

Hold down this button for 5 seconds. The AirStation will be initialized.

# Appendix E

## Regulatory Compliance Information

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC ID:

WHR-HP-G300N: FDI-09101621-0

WHR-HP-GN : FDI-09101567-0

### Important Note - FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

## European Union Notice:

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

- EN60950-1:  
2006 Safety of Information Technology Equipment
- EN 50385: 2002  
Product standard to demonstrate the compliance of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110MHz - 40 GHz) - General public
- EN 300 328 V1.7.1 (2006-10)  
Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive
- EN 301 489-1 V1.8.1 (2008-04)  
Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements
- EN 301 489-17 V1.3.2 (2008-04)  
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.



Česky[Czech]

Buffalo Technology Inc. tímto prohlašuje, že tento AirStation WHR-HP-GN/G300N je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Dansk[Danish]

Undertegnede Buffalo Technology Inc. erklærer herved, at følgende udstyr AirStation WHR-HP-GN/G300N overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Deutsch[German]

Hiermit erklärt Buffalo Technology Inc. dass sich das Gerät AirStation WHR-HP-GN/G300N in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

Eesti[Estonian]

Käesolevaga kinnitab Buffalo Technology Inc. seadme AirStation WHR-HP-GN/G300N vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

English

Hereby, Buffalo Technology Inc. declares that this AirStation WHR-HP-GN/G300N is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Español[Spanish]

Por medio de la presente Buffalo Technology Inc. declara que el AirStation WHR-HP-GN/G300N cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Ελληνική[Greek]

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Buffalo Technology Inc. ΔΗΛΩΝΕΙ ΟΤΙ AirStation WHR-HP-GN/G300N ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.

Français[French]

Par la présente Buffalo Technology Inc. déclare que l'appareil AirStation WHR-HP-GN/G300N est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano[Italian]

Con la presente Buffalo Technology Inc. dichiara che questo AirStation WHR-HP-GN/G300N è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Latviski[Latvian]

Ar šo Buffalo Technology Inc. deklarē, ka AirStation WHR-HP-GN/G300N atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Lietuvių[Lithuanian]

Šiuo Buffalo Technology Inc. deklaruoją, kad šis AirStation WHR-HP-GN/G300N atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Nederlands[Dutch]

Hierbij verklaart Buffalo Technology Inc. dat het toestel AirStation WHR-HP-GN/G300N in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Malti[Maltese]

Hawnhekk, Buffalo Technology Inc. , jiddikjara li dan AirStation WHR-HP-GN/G300N jikkonforma mal-  
ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.

Magyar[Hungarian]

Alulírott, Buffalo Technology Inc. nyilatkozom, hogy a AirStation WHR-HP-GN/G300N megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Polski[Polish]

Niniejszym, Buffalo Technology Inc. , deklaruję, że AirStation WHR-HP-GN/G300N spełnia wymagania zasadnicze oraz stosowne postanowienia zawarte Dyrektywie 1999/5/EC.

Português[Portuguese]

Buffalo Technology Inc. declara que este AirStation WHR-HP-GN/G300N está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Slovensko[Slovenian]

Buffalo Technology Inc. izjavlja, da je ta AirStation WHR-HP-GN/G300N v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Slovensky[Slovak]

Buffalo Technology Inc. týmto vyhlasuje, že AirStation WHR-HP-GN/G300N spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Suomi[Finnish]

Buffalo Technology Inc. vakuuttaa täten että AirStation WHR-HP-GN/G300N tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svensk[Swedish]

Härmed intygar Buffalo Technology Inc. att denna AirStation WHR-HP-GN/G300N står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.



## Industry Canada statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### IMPORTANT NOTE:

#### Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device has been designed to operate with an antenna having a maximum gain of 2 dB. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

## Industry Canada ID:

WHR-HP-G300N: 6102A-025

WHR-HP-GN: 6102A-024

## For Taiwan 警語

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

## CONDICIONES (Mexico)

### PRIMERA

-El certificado provisional tiene vigencia de un año a partir de esta fecha y prodrá ser renovado hasta en dos ocasiones por el mismo período, para lo cual, previo a la fecha de vencimiento del Certificado deberá solicitar por escrito a esta Comisión su renovación. El Certificado definitivo tiene vigencia indefinida.

### SEGUNDA

-El Certificado de Homologación, podrá ser cancelado a petición del solicitante a cuando la Comisión Federal de Telecomunicaciones así lo determine con fundamento en el Artículo 149 del

Reglamento de Telecomunicaciones, o bien de acuerdo a lo señalado en el Capítulo Segundo de la Ley Federal de Procedimiento Administrativo.

### **TERCERA**

-Los equipos amparados por este Certificado de Homologación deberán tener indicado en alguna parte visible, firmemente adherido, el número de Certificado de Homologación correspondiente, así como la marca y modelo con la que se expide este Certificado.

### **CUARTA**

-La Comisión Federal de Telecomunicación podrá requerir en cualquier momento a la empresa presentación de información técnica adicional, así como las muestras del equipo para realizar pruebas de comportamiento y verificar las características del mismo.

### **QUINTA**

-Cualquier modificación estructural o de configuración técnica deberá someterse a consideración de la Comisión, para que ésta determine si procede el otorgamiento de una ampliación del Certificado de Homologación o si requiere de un nuevo Certificado.

### **SEXTA**

-El equipo que ampara el presente certificado deberá operar conforme a las regulaciones técnicas, reglas, reglamentos y otras disposiciones administrativas vigente o que llegara a emitir o adoptar la Comisión Federal de Telecomunicaciones y/o la Secretaría de Comunicaciones y Transportes.

### **SEPTIMA**

-El equipo de radiocomunicación que ampara el presente certificado deberá operar de conformidad con el Reglamento de Radiocomunicaciones de la Unión Internacional de Telecomunicaciones y el Cuadro Nacional de Atribución de Frecuencias México vigente.

### **OCTAVA**

-Las antenas de las estaciones terrenas deberán cumplir con el patrón de radiación Recomendado por la Unión Internacional de Telecomunicaciones, Sector de Radio Frecuencia UIT-R, en el caso de sistemas de microondas las antenas de los mismos deberán cumplir con las recomendaciones del UIT-R, conforme a su banda de operación.

### **NOVENA**

-La homologación de este equipo no implica la autorización para prestar servicios públicos de telecomunicaciones ni para establecer aplicaciones que obstruyan o invadan cualquier vía general de comunicación.

### **DECIMA**

- El incumplimiento de las condiciones estipuladas en este Certificado será motivo de sanción con base a lo dispuesto en la Ley de Vías General de Comunicación, Ley Federal de Telecomunicación y en el Reglamento de Telecomunicaciones.

# Appendix F

## Environmental Information

- The equipment that you have purchased has required the extraction and use of natural resources for its production.
- The equipment may contain hazardous substances that could impact health and the environment.
- In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems.
- The take-back systems will reuse or recycle most of the materials of your end life equipment in a sound way.
- The crossed-out wheeled bin symbol invites you to use those systems.



- If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

# Appendix G

## GPL Information

The source code for Buffalo products that use GPL code is available at <http://opensource.buffalo.jp/> .

# Appendix H

## Warranty Information

Buffalo Technology (Buffalo Inc.) products come with a two-year limited warranty from the date of purchase. Buffalo Technology (Buffalo Inc.) warrants to the original purchaser the product; good operating condition for the warranty period. This warranty does not include non-Buffalo Technology (Buffalo Inc.) installed components. If the Buffalo product malfunctions during the warranty period, Buffalo Technology/(Buffalo Inc.) will, replace the unit, provided the unit has not been subjected to misuse, abuse, or non-Buffalo Technology/(Buffalo Inc.) authorized alteration, modifications or repair.

All expressed and implied warranties for the Buffalo Technology (Buffalo Inc) product line including, but not limited to, the warranties of merchantability and fitness of a particular purpose are limited in duration to the above period.

Under no circumstances shall Buffalo Technology/(Buffalo Inc.) be liable in any way to the user for damages, including any lost profits, lost savings or other incidental or consequential damages arising out of the use of, or inability to use the Buffalo products.

In no event shall Buffalo Technology/(Buffalo Inc.) liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential damages resulting from the use of the product, its accompanying software, or its documentation. Buffalo Technology (Buffalo Inc.) does not offer refunds for any product.

@ 2003-2009 Buffalo Technology (Buffalo, Inc.)

# Appendix I

## Contact Information

### North America

---

North American Technical Support by phone is available 24 hours a day, 7 days a week. (USA and Canada).

**Toll-free:** (866) 752-6210 | **Email:** [info@buffalotech.com](mailto:info@buffalotech.com)

### Europe

---

Buffalo Technology provides technical support in English, German, French, Italian, and Spanish.

UK	0845 3511005
Austria	08101 0251552
Belgium	0787 99917
Denmark	70150919
Finland	010802812
France	0811 650220
Germany	01801 003757
Ireland	1890 719901
Italy	848 782113
Netherlands	09000401256
Norway	81000050
Spain	9018 10750
Sweden	0771404105
Switzerland	0848 560374

For all other regions please contact +353 61 704617

[www.buffalo-technology.com/contact](http://www.buffalo-technology.com/contact)

## Asia Pacific

---

Australia	TEL: 1300 761 310
China	TEL: 86-800-820-8262 e-mail: support@buffalo-china.com
Hong Kong	TEL: 852-2345-0005 e-mail: support@hornington.com
India	TEL: 1-8004256210 e-mail: csbuffalo@accelfrontline.in
Indonesia	TEL: 021-6231-2893
Malaysia	TEL: 03-5032-0138 e-mail: buffalo@ecsm.com.my
Philippines	TEL: 2-688-3999 e-mail: digisupport@msi-ecs.com.ph
Republic of Korea	TEL: 02-2057-2095 e-mail: support@buffalotech.co.kr
Singapore	TEL: 65-6297-2085 e-mail: buffalo@blumm.com
Taiwan	TEL: 0800-660-886 e-mail: support@buffalo-tech.com.tw
Thailand	TEL: 02-716-6669
Other Areas	Please contact the shop or distributor where you purchased the unit, referring to the attached warranty card issued by the distributor.